

# NE-4100 Series

---

## User's Manual

[www.moxa.com/product](http://www.moxa.com/product)

First Edition, November 2003



**Moxa Technologies Co., Ltd.**

Tel: +886-2-8919-1230

Fax: +886-2-8919-1231

[www.moxa.com](http://www.moxa.com)

[support@moxa.com.tw](mailto:support@moxa.com.tw) (Worldwide)

[support@moxa.com](mailto:support@moxa.com) (The Americas)

# **NE-4100 Series User's Manual**

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

## **Copyright Notice**

Copyright © 2003 Moxa Technologies Co., Ltd.  
All rights reserved.  
Reproduction without permission is prohibited.

## **Trademarks**

MOXA is a registered trademark of Moxa Technologies Co., Ltd.  
All other trademarks or registered marks in this manual belong to their respective manufacturers.

## **Disclaimer**

Information in this document is subject to change without notice and does not represent a commitment on the part of Moxa.

Moxa provides this document “as is,” without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Moxa reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Moxa Technologies assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.



# Table of Contents

<b>Chapter 1</b>	<b>Introduction .....</b>	<b>1-1</b>
	Overview .....	1-2
	Package Checklist.....	1-2
	Product Features.....	1-2
	Product Specifications.....	1-3
<b>Chapter 2</b>	<b>Panel Layout and Pin Assignments .....</b>	<b>2-1</b>
	NE-4100T .....	2-2
	Panel Layouts.....	2-2
	Pin Assignments .....	2-3
	Block Diagram.....	2-4
	LED Indicators.....	2-5
	NE-4110 Series .....	2-6
	Panel Layouts.....	2-6
	Pin Assignments .....	2-7
	Block Diagrams .....	2-8
	LED Indicators.....	2-9
	NE-4120 Series .....	2-10
	Panel Layouts.....	2-10
	Pin Assignments .....	2-11
	Block Diagrams .....	2-12
	LED Indicators.....	2-13
<b>Chapter 3</b>	<b>Getting Started .....</b>	<b>3-1</b>
	Wiring Requirements.....	3-2
	Attaching NE-4100T to NE-4100T-ST .....	3-2
	Attaching NE-4110 Series to NE-4110-ST.....	3-3
	Circuit Pad for External Connection .....	3-4
	Connecting the Power.....	3-4
	Connecting to the Network.....	3-4
	Connecting to a Serial Device.....	3-5
	DI/O Settings .....	3-5
	Digital Output LED Circuit Design .....	3-6
	Selecting the Interface .....	3-6
<b>Chapter 4</b>	<b>Choosing the Proper Operation Mode .....</b>	<b>4-1</b>
	Overview .....	4-2
	TCP Server Mode .....	4-2
	TCP Client Mode.....	4-3
	UDP Mode.....	4-3
	Real COM Mode.....	4-4
<b>Chapter 5</b>	<b>Initial IP Address Configuration .....</b>	<b>5-1</b>
	Initializing NE-4100 Series' IP Address .....	5-2
	Factory Default IP Address .....	5-2
	NE-4100 Series Administration Suite.....	5-2
	ARP .....	5-2
	Telnet Console .....	5-4
	Serial Console (19200, n, 8, 1) .....	5-6
<b>Chapter 6</b>	<b>Web Console Configuration.....</b>	<b>6-1</b>
	Opening Your Browser .....	6-2
	Basic Settings.....	6-3
	Network Settings .....	6-5
	Serial Settings .....	6-8
	Operating Settings .....	6-9

	TCP Server Mode .....	6-10
	Real COM Mode.....	6-12
	TCP Client Mode.....	6-14
	UDP Mode .....	6-17
	Accessible IP Settings.....	6-19
	Auto Warning Settings .....	6-20
	E-mail and SNMP Trap .....	6-20
	Event Type.....	6-21
	Digital IO.....	6-22
	DIO Monitor .....	6-23
	Change Password.....	6-23
	Load Factory Default Settings.....	6-24
	Save/Restart.....	6-24
<b>Chapter 7</b>	<b>Configuring Windows Administrator .....</b>	<b>7-1</b>
	Overview .....	7-2
	Installing Network Enabler Administrator .....	7-2
	Starting Configuration .....	7-4
	Broadcast Search.....	7-4
	Unlock Password Protection.....	7-6
	Configuring NE-4100 Series.....	7-8
	Upgrading Firmware.....	7-9
	Export/Import.....	7-10
	Monitor .....	7-11
	Port Monitor.....	7-15
	COM Mapping .....	7-16
	On-line COM Mapping.....	7-16
	Off-line COM Mapping .....	7-19
<b>Appendix A</b>	<b>Well Known Port Numbers .....</b>	<b>A-1</b>
<b>Appendix B</b>	<b>NECI Library .....</b>	<b>B-1</b>
<b>Appendix C</b>	<b>DIO Commands .....</b>	<b>C-1</b>
<b>Appendix D</b>	<b>SNMP Agent with MIB II &amp; RS-232 Like Group .....</b>	<b>D-1</b>
<b>Appendix E</b>	<b>Service Information .....</b>	<b>E-1</b>
	MOXA Internet Services.....	E-2
	Problem Report Form.....	E-3
	Product Return Procedure .....	E-4



# Introduction

---

Welcome to MOXA NE-4100 Series Serial to Ethernet Embedded Network Enablers. These compact sized Network Enablers not only let you network-enable your serial devices, but also come equipped with built-in TCP/IP protocols for fast integration, saving you time and energy on programming.

The following topics are covered in this chapter:

- ❑ **Overview**
- ❑ **Package Checklist**
- ❑ **Product Features**
- ❑ **Product Specifications**

---

## Overview

NE-4100 Series Network Enablers are serial to Ethernet embedded modules that come in 3 types: drop-in type (NE-4100T), RJ45 type (NE-4110S/A), and pin header type (NE-4120S/A). The letters at the end of the model numbers indicate the serial signal supported by the product. T represents TTL, whereas S and A represent RS-232 and RS-422/485, respectively.

NE-4100 Series products are very compact—less than half the size of a credit card. With such a small size, these Embedded Network Enablers fit into almost any kind of serial device to make the serial device 10/100M Ethernet ready. These products also come with a built-in TCP/IP stack for fast integration with your serial devices. This means that your engineers no longer need to spend a lot of time on TCP/IP programming, but instead can focus on developing other major features, shortening your product's time to market. The reliable TCP/IP communication firmware that comes with NE-4100 Series products can be configured easily with a user-friendly Windows utility, Web browser, serial console, or telnet console. In addition, a Windows-based NECI (Network Enabler Configuration Interface) Library is available to help you develop your own Windows utilities.

An integration kit and a complete development kit containing a development board, documents, sample code, cables, and accessories are available for evaluation and development use.

## Package Checklist

- 1 NE-4100 Series module (depending on which model you order)
- 1 NE-4100 Series-ST (the evaluation board )
- NE-4100 Series Document & Software CD
- NE-4100 Series Hardware Installation Guide
- Universal Power Adapter
- Null modem cable
- Product Warranty Booklet

NOTE: *Notify your sales representative if any of the above items is missing or damaged.*

## Product Features

NE-4100 Series products have the following features:

- TTL, RS-232, or RS-422/485 to 10/100 Mbps auto-sensing Ethernet interface
- Compact size with ready-to-go design (NE-4100T measures 45 × 36 mm, NE-4110/4120 measures 57 × 40 mm)
- Ready-to-use TCP/IP firmware for fast integration
- TCP Server, TCP Client, UDP, Real COM driver operation modes
- Low power consumption (1.5W)
- Easy configuration with Web browser, serial console, Windows utility, or telnet console
- 4 dedicated GPIOs for users' applications
- Programmable version available



## Product Specifications

	NE-4100T	NE-4110S/A	NE-4120S/A
System			
CPU	16-bit MCU		
RAM	2 MB		
Flash	1 MB		
LAN			
Ethernet	10/100 Mbps, TTL	10/100 Mbps, RJ45	10/100 Mbps, pin headers
Protection	Built-in transformer with 1.5 KV magnetic isolation		
Serial			
Interface	TTL	RS-232 (NE-4110S) RS-422/485 (NE-4110A)	RS-232 (NE-4120S) RS-422/485 (NE-4120A)
Port Type	Pin header	RJ45	Pin header
Signals	TTL, RS-232: TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND RS-422: TxD+, TxD-, RxD+, RxD-, GND RS-485 (2-wire): Data+, Data-, GND RS-485 (4-wire): TxD+, TxD-, RxD+, RxD-, GND		
Serial Communication Parameters			
Parity	None, Even, Odd, Space, Mark		
Data Bits	5, 6, 7, 8		
Stop Bit	1, 2		
Flow Control	RTX/CTS, XON/XOFF		
Transmission Speed	50 bps to 115.2 Kbps		
Software Features			
Protocols	ICMP, ARP, IP, TCP, UDP, DHCP, HTTP, SNMP, SMTP		
Operating Mode	TCP Server, TCP Client, UDP, Real COM mode		
Utilities	Configurator utility for Windows 95/98/ME/NT/2000/XP		
Configuration	Web Browser, Serial Console, Telnet Console, or Windows Utility		
Power Requirements			
Power Input	5 VDC		
Power Consumption	290 mA @ 5 VDC (Max.)		
Environment			
Operating Temperature	0 to 70°C (32 to 158°F), 5 to 95%RH		
Storage Temperature	-20 to 85°C (-4 to 185°F), 5 to 95%RH		
Regulatory Approvals			
EMC	FCC Class A, CE Class A		
Warranty	5 years		



## Panel Layout and Pin Assignments

---

This chapter includes information about the layouts and pin assignments for NE-4100 Series products. The layouts and reference circuit diagrams for the evaluation boards are also covered. The evaluation boards are used for evaluation and development.

The following topics are covered in this chapter:


- ❑ **NE-4100T**
  - Panel Layouts
  - Pin Assignments
  - Block Diagram
  - LED Indicators
- ❑ **NE-4110 Series**
  - Panel Layouts
  - Pin Assignments
  - Block Diagrams
  - LED Indicators
- ❑ **NE-4120 Series**
  - Panel Layouts
  - Pin Assignments
  - Block Diagrams
  - LED Indicators

## NE-4100T


NE-4100T is a TTL-to-Ethernet drop-in type network enabler. It measures 45 × 36 mm, and has a dual-in-line, 26-pin design, making it easy to integrate with your serial devices.

### Panel Layouts

Top Panel of NE-4100T

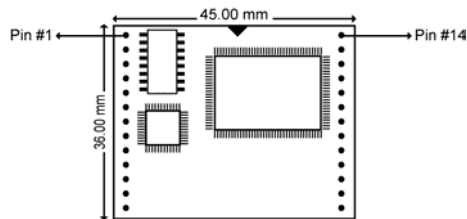

Top Panel of NE-4100T-ST

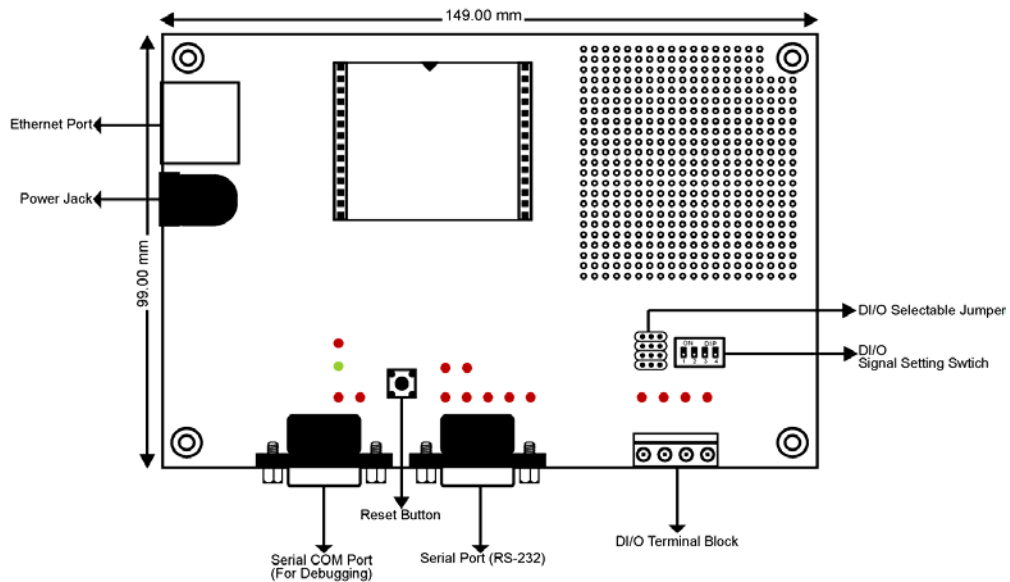

## Pin Assignments

### NE-4100T

Pin	Signal
1	ETx+
2	ETx-
3	ERx+
4	ERx-
5	10M LED
6	TXD
7	RXD
8	RTS
9	CTS
10	Reset
11	GND
12	GND
13	TXD1*

Pin	Signal
14	PIO0
15	PIO1
16	PIO2
17	PIO3
18	100M LED
19	DCD
20	DSR
21	DTR
22	GND
23	Ready LED
24	+5V
25	+5V
26	RXD1*


\*Pins 13 and 26 control NE-4100T-ST Debug Serial COM Port's TXD and RXD signals. The location of the Serial COM Port is shown on the previous page under **Top Panel of NE-4100-ST**. This Serial COM Port is not needed during normal operation. However, once the network fails and you wish to configure your NE-4100T, you can connect the Debug Serial COM Port, and configure your NE-4100T with the serial console.

	Ethernet Signals:	ETx+, ETx-, ERx+, ERx-
<b>NOTE</b>	NE-4100T	Serial Signals: TXD, RXD, RTS, CTS, DCD, DSR, DTR
	LED Controls:	10M LED, 100M LED, Ready LED

### NE-4100T-ST Serial Port Pinouts


#### DB9 Male Connector for debugging when the Network fails

Pin	Signal
2	TXD
3	RXD
5	GND

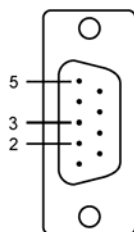


#### DB9 Male Connector for Connecting Serial Devices

Pin	Signal
1	DCD
2	RXD
3	TXD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS

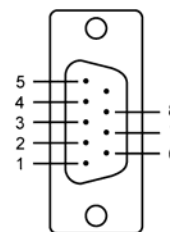

## Block Diagram

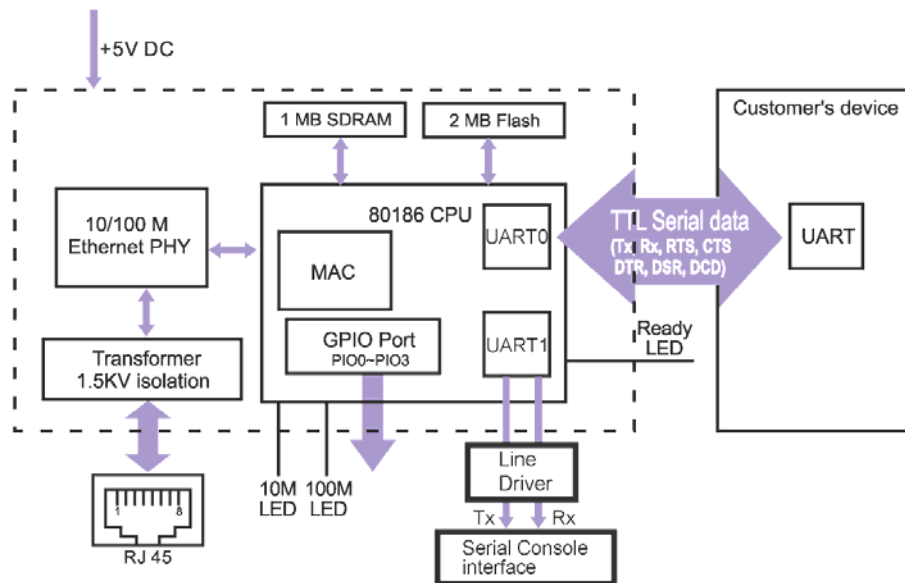

## LED Indicators


LED Name	LED Color	LED Function
Power	red	Indicates the power is on.
Ready	green	Steady on: Power is on and NE-4100T-ST is functioning normally.  Blinking: NE-4100T-ST has been located by NE-4100T-ST Administrator's Location function.
	off	Power is off, or power error condition exists.
PIO0	red	Indicates that PIO is in "low" (0) status.
PIO1	red	Indicates that PIO is in "low" (0) status.
PIO2	red	Indicates that PIO is in "low" (0) status.
PIO3	red	Indicates that PIO is in "low" (0) status.
TXD0	red	Indicates that TXD0 has a signal.
RXD0	red	Indicates that RXD0 has a signal.
DTR0	red	Indicates that DTR0 has a signal.
CTS0	red	Indicates that CTS0 has a signal.
DSR0	red	Indicates that DSR0 has a signal.
DCD0	red	Indicates that DCD0 has a signal.
RTS0	red	Indicates that RTS0 has a signal.
TXD1	red	Indicates that TXD1 has a signal.
RXD1	red	Indicates that RXD1 has a signal.

## NE-4110 Series


NE-4110 Series consists of 2 models: NE-4110S and NE-4110A. NE-4110S is an RS-232-to-Ethernet embedded module, whereas NE-4110A is an RS-422/485-to-Ethernet module. They both are RJ45 type network enablers, and measure 57 × 40 mm.

### Panel Layouts


Top Panel of NE-4110S

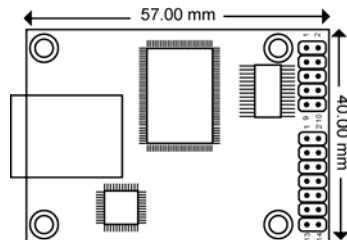

Top Panel of NE-4110A

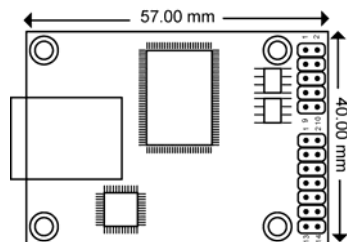

Top Panel of NE-4110-ST

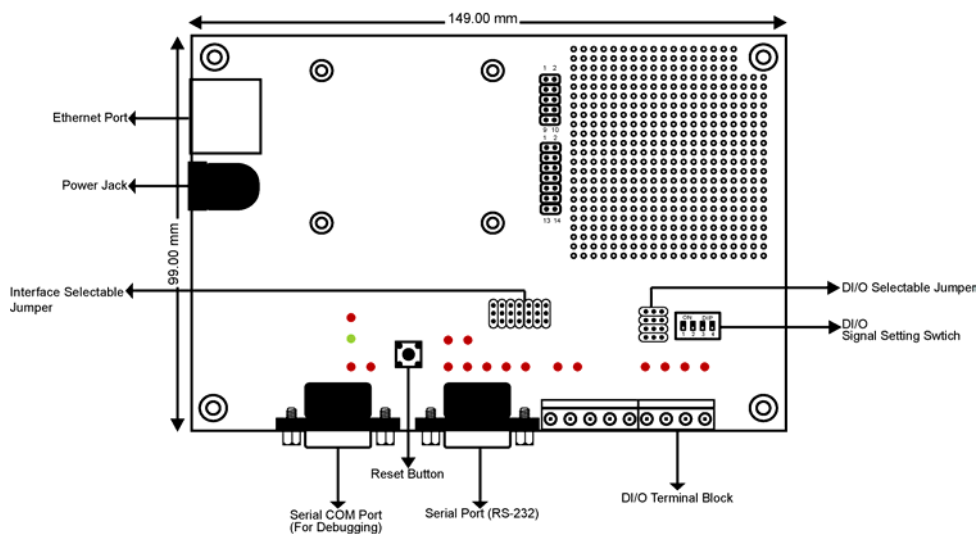



## Pin Assignments

### Serial Header Pinouts for NE-4110S

NC	10	9	NC
CTS0	8	7	RTS0
DSR0	6	5	GND
DTR0	4	3	TxD0
RxD0	2	1	DCD0

### Serial Header Pinouts for NE-4110A

NC	10	9	NC
NC	8	7	NC
NC	6	5	GND
RxD-	4	3	RxD+
TxD+	2	1	TxD-

---

**NOTE** The symbols “B” and “A” are often used in place of “+” and “-”, respectively.

---




---

**NOTE** For the 2-wire RS-485 interface, pin 3 is for Data+ (B) and pin 4 is for Data- (A).

---

### Ethernet Port Pinouts for NE-4110S/A

Pin	Signal
1	Tx+
2	Tx-
3	Rx+
6	Rx-

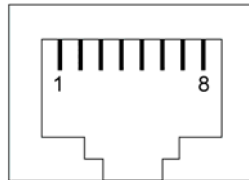


**RJ45 Port**

### DIO and LED Header Pinouts for NE-4110S/A


GND	14	13	VCC(+5V)
GND	12	11	VCC(+5V)
DIO0	10	9	10M_LED
DIO1	8	7	100M_LED
DIO2	6	5	Ready_LED
DIO3	4	3	Reset
TxD1	2	1	RxD1

## Block Diagrams

NE-4110S Block Diagram

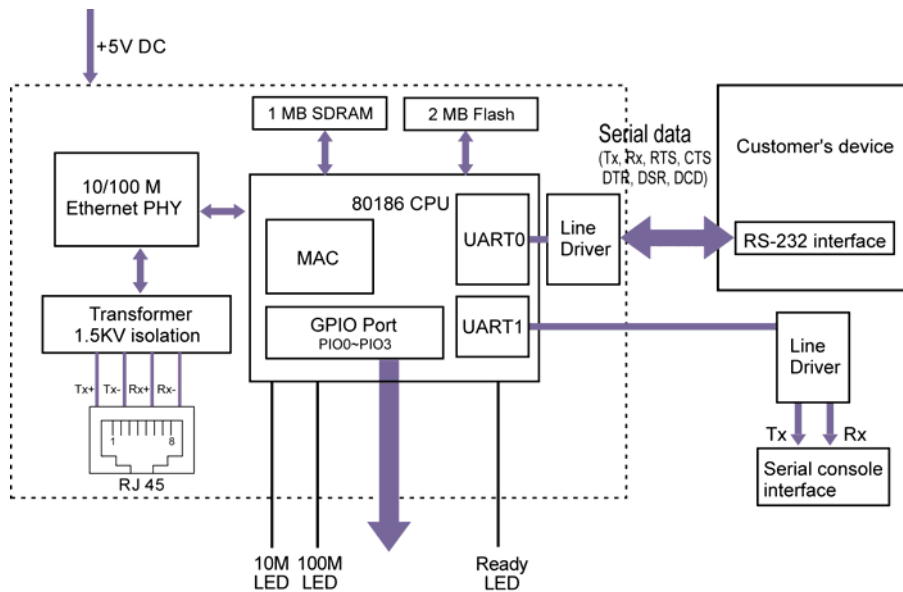

NE-4110A Block Diagram

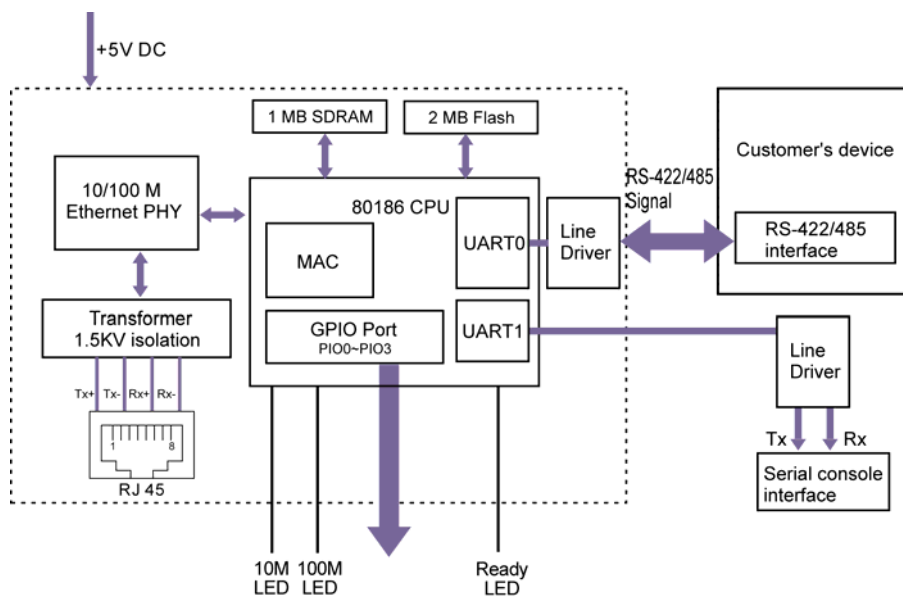

## LED Indicators

LED Name	LED Color	LED Function
Power	red	Indicates the power is on.
Ready	green	<p>Steady on: Power is on and NE-4110-ST is functioning normally.</p> <p>Blinking: NE-4110-ST has been located by NE-4110-ST Administrator's Location function.</p>
	off	Power is off, or power error condition exists.
PIO0	red	Indicates that PIO is in "low" (0) status.
PIO1	red	Indicates that PIO is in "low" (0) status.
PIO2	red	Indicates that PIO is in "low" (0) status.
PIO3	red	Indicates that PIO is in "low" (0) status.
TXD0	red	Indicates that TXD0 has a signal.
RXD0	red	Indicates that RXD0 has a signal.
DTR0	red	Indicates that DTR0 has a signal.
CTS0	red	Indicates that CTS0 has a signal.
DSR0	red	Indicates that DSR0 has a signal.
DCD0	red	Indicates that DCD0 has a signal.
RTS0	red	Indicates that RTS0 has a signal.
TXD1	red	Indicates that TXD1 has a signal.
RXD1	red	Indicates that RXD1 has a signal.
TXD	red	Indicates that TXD has a signal.
RXD/Data	red	Indicates that RXD/Data has a signal.


---

## NE-4120 Series


NE-4120 Series are very similar to NE-4110 Series in many ways, except that NE-4120 Embedded Network Enablers are the pin header type. NE-4120 Series has 2 models: NE-4120S and NE-4120A, both of which measure 57 × 40 mm.

### Panel Layouts

Top Panel of NE-4120S

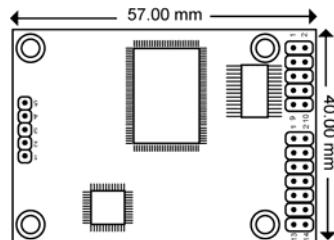

Top Panel of NE-4120A

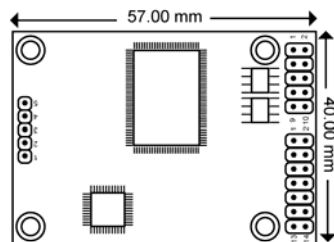

---

#### NOTE

NE-4120 Series products use the same type of evaluation board as NE-4110 Series products. The top panel of the evaluation board for both NE-4110 Series and NE-4120 Series is shown in the previous **NE-4110 Series** section.

---

## Pin Assignments

### Serial Header Pinouts for NE-4120S

NC	10	9	NC
CTS0	8	7	RTS0
DSR0	6	5	GND
DTR0	4	3	TxD0
RxD0	2	1	DCD0

### Serial Header Pinouts for NE-4120A

NC	10	9	NC
NC	8	7	NC
NC	6	5	GND
RxD-	4	3	RxD+
TxD+	2	1	TxD-

---

**NOTE** The symbols “B” and “A” are often used in place of “+” and “-”, respectively.

---



---

**NOTE** For 2-wire RS-485 interface, pin 3 is for Data+ (B) and pin 4 is for Data- (A).

---

### Ethernet Header Pinouts for NE-4120S/A


Tx+	1
Tx-	2
	3
Rx+	4
Rx-	5

### DIO and LED Header Pinouts for NE-4120S/A


GND	14	13	VCC(+5V)
GND	12	11	VCC(+5V)
DIO0	10	9	10M_LED
DIO1	8	7	100M_LED
DIO2	6	5	Ready_LED
DIO3	4	3	Reset
TxD1	2	1	RxD1

## Block Diagrams

NE-4120S Block Diagram

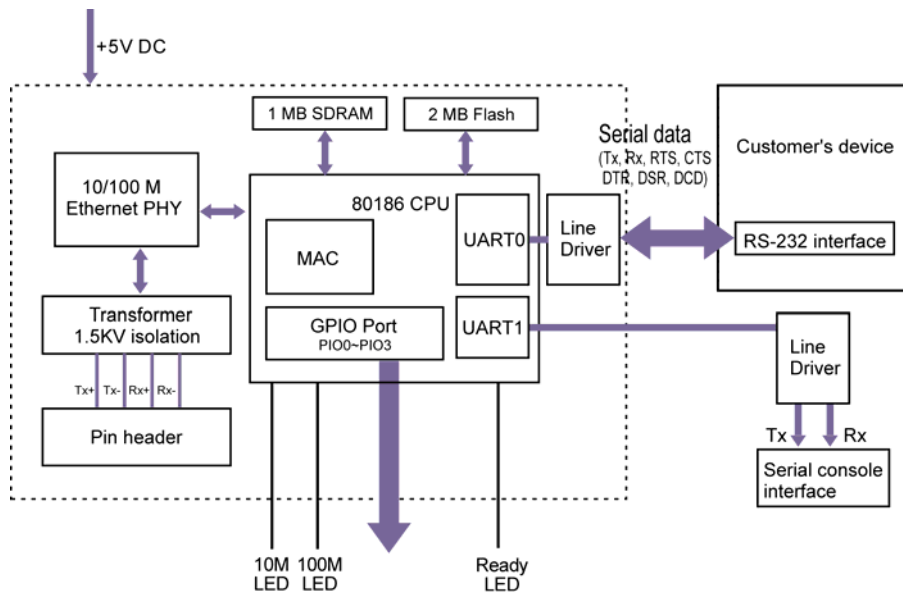

NE-4120A Block Diagram

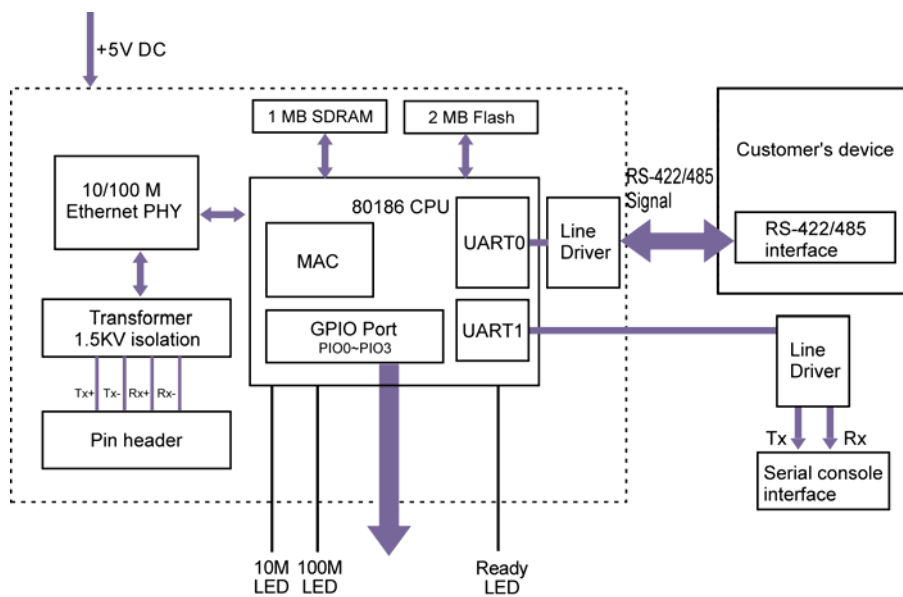

## LED Indicators

LED Name	LED Color	LED Function
Power	red	Indicates the power is on.
Ready	green	Steady on: Power is on and NE-4110-ST is functioning normally.  Blinking: NE-4110-ST has been located by NE-4110-ST Administrator's Location function.
	off	Power is off, or power error condition exists.
PIO0	red	Indicates that PIO is in "low" (0) status.
PIO1	red	Indicates that PIO is in "low" (0) status.
PIO2	red	Indicates that PIO is in "low" (0) status.
PIO3	red	Indicates that PIO is in "low" (0) status.
TXD0	red	Indicates that TXD0 has a signal.
RXD0	red	Indicates that RXD0 has a signal.
DTR0	red	Indicates that DTR0 has a signal.
CTS0	red	Indicates that CTS0 has a signal.
DSR0	red	Indicates that DSR0 has a signal.
DCD0	red	Indicates that DCD0 has a signal.
RTS0	red	Indicates that RTS0 has a signal.
TXD1	red	Indicates that TXD1 has a signal.
RXD1	red	Indicates that RXD1 has a signal.
TXD	red	Indicates that TXD has a signal.
RXD/Data	red	Indicates that RXD/Data has a signal.





## Getting Started

---

This chapter includes information about installing NE-4100 Series products.

The following topics are covered in this chapter:

- ❑ **Wiring Requirements**
- ❑ **Attaching NE-4100T to NE-4100T-ST**
- ❑ **Attaching NE-4110 Series to NE-4110-ST**
- ❑ **Circuit Pad for External Connection**
- ❑ **Connecting the Power**
- ❑ **Connecting to the Network**
- ❑ **Connecting to a Serial Device**
- ❑ **DI/O Settings**
- ❑ **Selecting the Interface**

---

## Wiring Requirements

This section describes some important points that need your attention before proceeding with any installation.

---

### ATTENTION

#### Safety First!



Be sure to disconnect the power cord before installing and/or wiring your evaluation boards for NE-4100 Series.

---

---

#### Wiring Caution!

### ATTENTION



Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size.

If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

---

---

### ATTENTION

#### Temperature Caution!



Please take care when handling the evaluation boards. When plugged in, the evaluation boards' internal components generate heat, and consequently the board may feel hot to the touch.

---

You should also pay attention to the following points:


- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.

**NOTE:** Do not run signal or communication wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.

- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring that shares similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- Where necessary, it is strongly advised that you label wiring to all devices in the system.


## Attaching NE-4100T to NE-4100T-ST

Before connecting your NE-4100T-ST to the power supply, network, and serial device, you first need to attach NE-4100T to NE-4100T-ST. In the center of the evaluation boards, there is a square with one white inverted triangle (shown as black in the figure) on one of its sides, and 2 rows of female sockets on the other two sides. The NE-4100T board also has a white inverted triangle on one of its sides. When attaching your NE-4100T to NE-4100T-ST, make sure these 2 white inverted triangles are facing the same direction, as shown in the following figure.

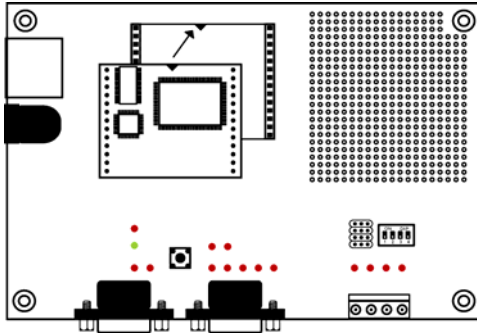


## Attaching NE-4110 Series to NE-4110-ST

There is an RJ45 Ethernet connector located on one side of NE-4110-ST, and an RJ45 Ethernet connector located on one side of the NE-4110 Series boards. When attaching an NE-4110 Series board to NE-4110-ST, make sure these 2 RJ45 connectors are facing the same direction, as shown below.

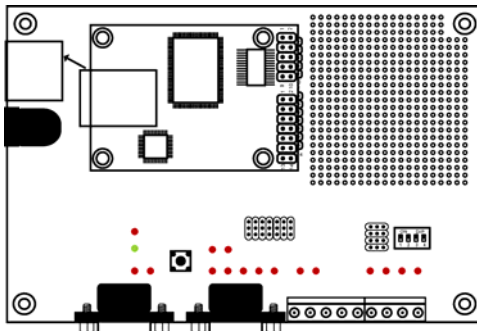


There are 2 sets of jumpers situated on the side of the NE-411S Series and NE-4110-ST boards opposite the side with the RJ45 connector. These 4 sets of jumpers are for communications between the NE-4110 Series modules and the evaluation board. Connect Jumper 1 (J1) on the NE-4110 Series module to Jumper 9 (J9) on the evaluation board, and Jumper 2 (J2) on the NE-4110 Series module to Jumper 10 (J10), as shown below.

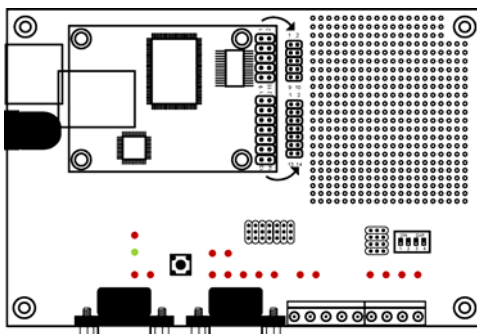

## Circuit Pad for External Connection

The circuit pad located on the right side of the evaluation boards (NE-4100T-ST and NE-4110-ST) is used to connect the power supply (5V and 3.3V), devices, and ground. The circuit pad is circled in red in the figure below. As shown in the second figure, the first row of the circuit pad is for connecting a 5V power supply, whereas the second row is for connecting a 3.3V power supply. J3's and J9's header pinouts are exactly the same, which means that J3's pin 1 corresponds to J9's pin 1, pin 2 corresponds to pin 2, etc. J4's pinouts are the same as J10's, which means that J4's pin 1 corresponds to J10's pin 1. The last row of the circuit pad is for grounding.

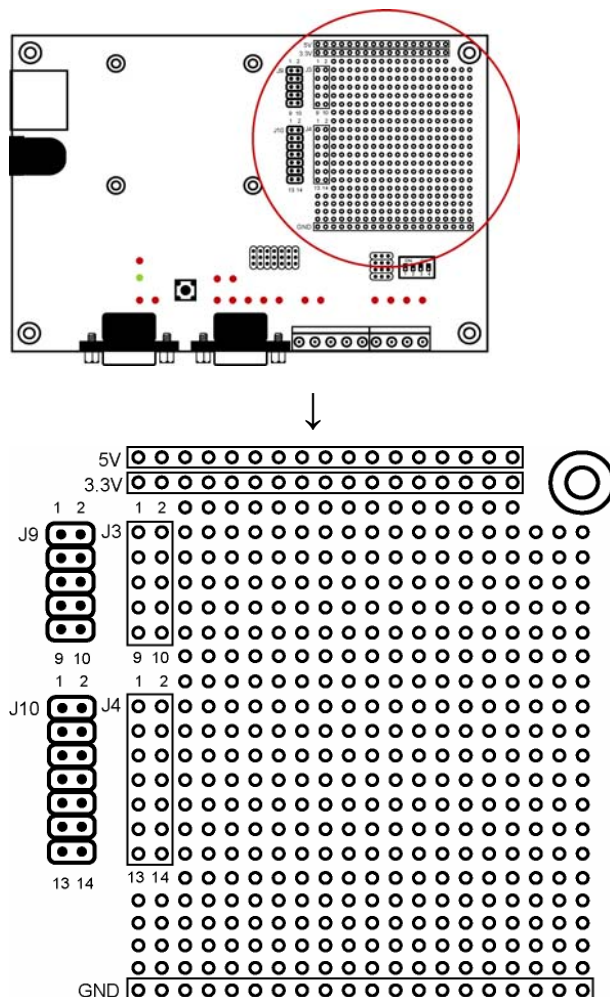

## Connecting the Power

Connect the 12 VDC power line with the evaluation boards' power jack. If the power is properly supplied, the "Power" LED will show a solid red color until the system is ready, at which time the "Ready" LED will show a solid green color.

## Connecting to the Network

If you are using NE-4100T, connect one end of the Ethernet cable to the NE-4100T-ST's RJ45 Ethernet port, and the other end of the cable to the Ethernet network. If you are using NE-4110 Series, connect one end of the Ethernet cable to the NE-4110 Series board and the other end of the cable to the Ethernet network. If the cable is properly connected, the evaluation boards will indicate a valid connection to the Ethernet in the following ways:



The upper right corner LED indicator blinks with green color when the cable is properly connected to a 100 Mbps Ethernet network, and data is being transmitted.

The upper left corner LED indicator blinks with yellow color when the cable is properly connected to a 10 Mbps Ethernet network, and data is being transmitted.

## Connecting to a Serial Device

Connect the serial data cable between the evaluation boards (NE-4100T-ST and NE-4110-ST) and the serial device.


## DI/O Settings

NE-4100 Series Embedded Network Enablers support 4 Digital I/Os. Digital Output uses 2 signals to control the devices connected to the terminal block on the evaluation boards (NE-4100T-ST and NE-4110-ST), such as relay devices. These 2 signals are formed by changes between high and low voltages. For example, you can program your DO0 to maintain “high voltage” (in this case, the DO0’s LED will not light up), and change to “low voltage” (in this case, the DO0’s LED will light up) when you wish to trigger the relay device. With these 2 output signals, you can control the on/off status of your devices. To select Digital Output mode, use the DI/O selectable jumper, and then use Web Console, which we discuss in chapter 6, to configure the on/off status.


Digital Input also uses the 2 signals mentioned above to recognize the messages coming from your device, such as a sensor. Since it is risky to use the actual device, such as a very expensive sensor, while you are still developing the application, we provide Digital Input Dip Switches as a simulator for simulating the actual devices on which you are going to implement your applications.

Unlike Digital Output mode, NE-4100 Series boards wait passively for incoming signals when set to Digital Input mode. For example, you can use the Dip Switches to configure DI0 to “On” status, meaning when no signal is coming in, it stays in “low voltage” status. On the other hand, when there is a signal coming in, the status will change to “high voltage.” To select Digital Input mode, use the DI/O selectable jumper, and then use Digital Input Dip Switches to configure “low” or “high” status.


The example below shows how to configure your DI/O modes. Suppose you wish to set DI/O0 and DI/O2 to be Digital Input, and DI/O1 and DI/O3 to be Digital Output.

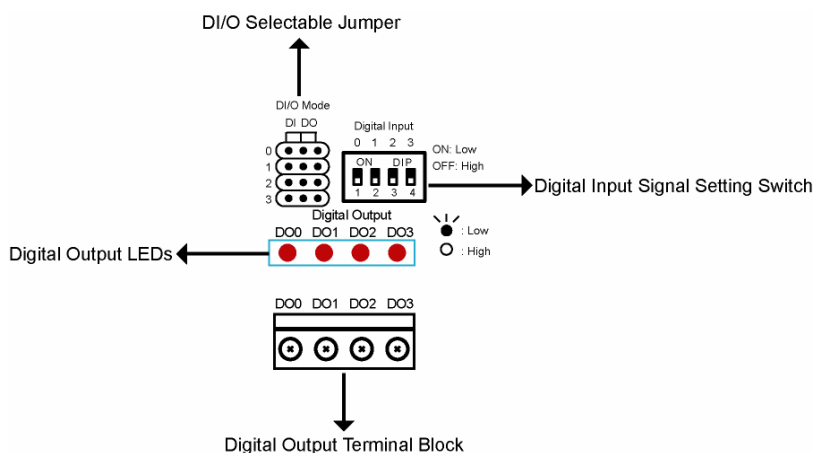

1. First, you need to use the DI/O selectable jumper to set the DI/O modes, as shown below.

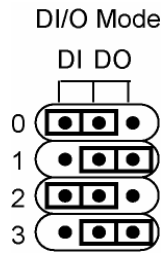

- After the DI/O modes are set, you need to use Digital Input Dip Switches to configure the status for DI0 and DI2. You can either configure the status to “Low” or “High.” If you wish to configure DI0’s status to “Low” and DI2’s status to “High,” set Dip Switch 1 to the “ON” position and DIP Switch 3 to the “OFF” position, as shown below.

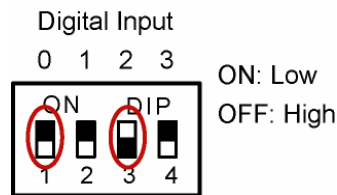

- DO1 and DO3’s status must be configured with the Web Console. If you configure DO1’s status to “Low” and DO3’s to “High,” the DO1’s LED will show solid red, and DO3’s LED will not light up. Refer to chapter 6 for more configuration details.



## Digital Output LED Circuit Design

The figure shown below is the digital output LED circuit design. The design is called “Sink.”



For developing your own applications, you need to be aware of the voltage limits shown below.

The output electric circuit is 1 mA

		Min.	Max.	Unit	Conditions
Low-level Input Voltage	Maximum voltage when DI is set to “Low” status.	-----	0.3xVCC	V	
High-level Input Voltage	Minimum voltage when DI is set to “High” status.	0.7xVCC	-----	V	
Low-level Input Voltage	Maximum voltage when DO is set to “Low” status.	-----	0.4	V	
High-level Input Voltage	Minimum voltage when DO is set to “High” status	2.4	-----	V	

Digital Output’s output current carries only 1 mA.


## Selecting the Interface

NE-4100 Series has different modules supporting 2 serial interfaces: NE-4110S and NE-4120S supports the RS-232 interface, and NE-4110A and NE-4120A support the RS-422/485 interface. For this reason, we provide an interface selectable jumper on the NE-4110-ST (the evaluation board for NE-4110 and NE-4120 Series).

For example, if you are using NE-4110S or NE-4120S modules, you need to use the jumper to select the RS-232 interface, as shown below.

JP2

 
Network Enabler  
Interface



If you are using NE-4110A or NE-4120A, you need to use the jumper to select the RS-485 interface, as shown below.

JP2

 Network Enabler  
Interface







## Choosing the Proper Operation Mode

---

In this section, we describe the various NE-4100 Series operation modes. The options include an operation mode that uses a driver installed on the host computer, and operation modes that rely on TCP/IP socket programming concepts. After choosing the proper operating mode in this chapter, refer to subsequent chapters for detailed configuration parameter definitions.

- ❑ **Overview**
- ❑ **TCP Server Mode**
- ❑ **TCP Client Mode**
- ❑ **UDP Mode**
- ❑ **Real COM Mode**

---

## Overview

NE-4100 Series Embedded Network Enablers act as a bridge to connect your serial devices and the Ethernet. The built-in TCP/IP stack saves you from spending a lot of time on programming networking protocols. Now just one simple step allows you to choose the proper operating mode, your computer access, to manage, and configure over the Internet from anywhere in the world.

Traditional SCADA and data collection systems rely on serial ports (RS-232/422/485) to collect data from various kinds of instruments. Since NE-4100 Series Network Enablers are equipped with the ability to convert between serial and Ethernet signals, your SCADA and data collection system will be able to access all devices connected to a standard TCP/IP network, regardless of whether the devices are used locally or at a remote site.

In addition to providing socket access, NE-4100 Series Network Enablers also come with a Real COM/TTY driver that transmits all serial signals intact. This means that your existing COM/TTY-based software can be preserved, without needing to invest in additional software.

Three different Socket Modes are available: TCP Server, TCP Client, and UDP Server/Client. The main difference between the TCP and UDP protocols is that TCP guarantees delivery of data by requiring the recipient to send an acknowledgement to the sender. UDP does not require this type of verification, making it possible to offer speedier delivery. UDP also allows multicasting of data to groups of IP addresses.

---

**NOTE** Pictures in this Chapter use NE-4110S as an example.


---

## TCP Server Mode

In TCP Server mode, NE-4100 Series provides a unique IP:Port address on a TCP/IP network. NE-4100 Series boards wait passively to be contacted by the host computer, allowing the host computer to establish a connection with and get data from the serial device. This operation mode also supports up to 4 simultaneous connections, so that multiple hosts can collect data from the same serial device—at the same time.

As illustrated in the figure, data transmission proceeds as follows:

1. The host requests a connection from the NE-4100 Series boards configured for TCP Server Mode.
2. Once the connection is established, data can be transmitted in both directions—from the host to the NE-4100 Series boards, and from the NE-4100 Series boards to the host.

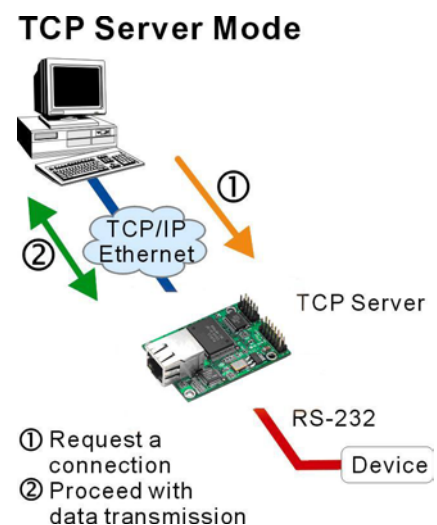

## TCP Client Mode


In **TCP Client mode**, NE-4100 Series boards can actively establish a TCP connection to a pre-defined host computer when serial data arrives.

After the data has been transferred, NE-4100 Series boards can automatically disconnect from the host computer by using the **TCP alive check time** or **Inactivity time** settings. Refer to the following chapters for more details.

As illustrated in the figure, data transmission proceeds as follows:

1. The NE-4100 Series board configured for TCP Client Mode requests a connection from the host.
2. Once the connection is established, data can be transmitted in both directions—from the host to the NE-4100 Series boards, and from the NE-4100 Series boards to the host.


### TCP Client Mode

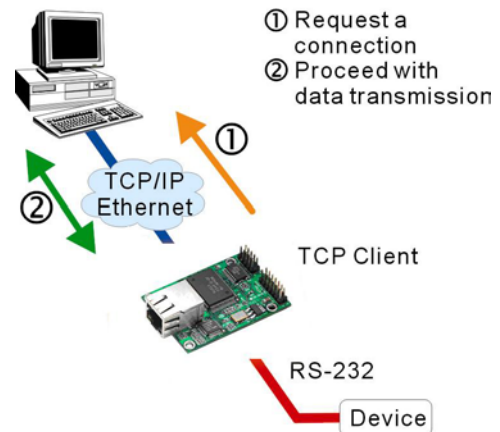

## UDP Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can multicast data from the serial device to multiple host computers, and the serial device can also receive data from multiple host computers, making this mode ideal for message display applications.


### UDP Mode

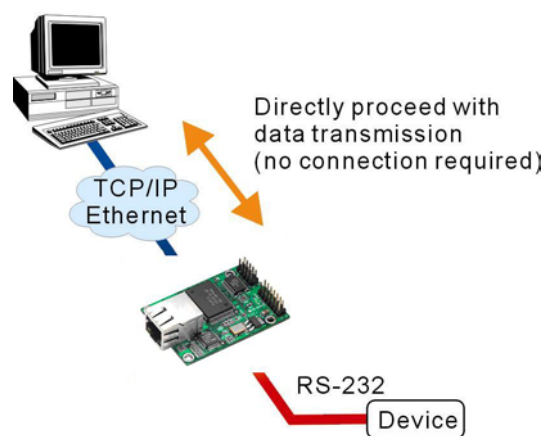

---

## Real COM Mode

NE-4100 Series boards come equipped with COM drivers that work with Windows 95/98/ME/NT/2000/XP systems, and also TTY drivers for Linux systems. The driver establishes a transparent connection between host and serial device by mapping the IP:Port of the NE-4100 Series boards' serial port to a local COM/TTY port on the host computer.

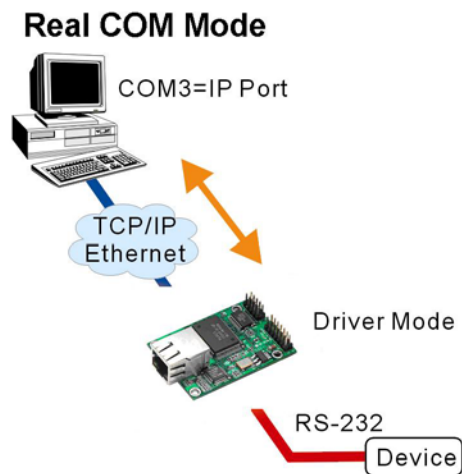

---

### ATTENTION



The driver used for Real COM Mode comes with the NE-4100 Series Windows Administrator which is installed automatically on your computer when you install the NE-4100 Series Administration Suite.

The important point is that Real COM Mode allows users to continue using RS-232/422/485 serial communications software that was written for pure serial communications applications. The driver intercepts data sent to the host's COM port, packs it into a TCP/IP packet, and then redirects it through the host's Ethernet card. At the other end of the connection, the NE-4100 Series boards accept the Ethernet frame, unpack the TCP/IP packet, and then transparently send it to the appropriate serial device attached to the NE-4100 Series boards' serial port.

---

### ATTENTION



Real COM Mode allows several hosts to have access control of the same NE-4100 Series board. The Moxa driver that comes with your NE-4100 Series controls host access to attached serial devices by checking the host's IP address.

Modify the Accessible IP Setting table when a public IP address is required for your application.

---

## Initial IP Address Configuration

---

When setting up your NE-4100 Series for the first time, the first thing you should do is configure the IP address. This chapter introduces the method for configuring NE-4100 Series' IP address. ***Select one of the initial IP Address configuration methods to configure NE-4100 Series' IP Address.*** For more details about network settings, see the *Network Settings* section from Chapter 6, *Web Console Configuration*.

This chapter includes the following sections:

- ❑ **Initializing NE-4100 Series' IP Address**
- ❑ **Factory Default IP Address**
- ❑ **NE-4100 Series Administration Suite** ← *recommended configuration method*
- ❑ **ARP**
- ❑ **Telnet Console**
- ❑ **Serial Console (19200, n, 8, 1)**

---

## Initializing NE-4100 Series' IP Address

1. Determine whether your NE-4100 Series board will use a Static IP or Dynamic IP (either DHCP or BOOTP application).
2. *If NE-4100 Series is used in a Static IP environment*, you can use NE-4100 Series Administration Suite, ARP, Web Console, Telnet Console, or Serial Console to configure the new IP address.
3. *If NE-4100 Series is used in a Dynamic IP environment*, you can use NE-4100 Series Administration suite, Web Console, Telnet Console, or Serial Console to configure NE-4100 Series to get an IP address dynamically with DHCP, DHCP/BOOTP, or BOOTP.

---

### ATTENTION



Consult your network administrator on how to reserve a fixed IP address (for your NE-4100 Series) in the MAC-IP mapping table when using a DHCP Server or BOOTP Server. In most applications, you should assign a fixed IP address to your NE-4100 Series.

---

## Factory Default IP Address

NE-4100 Series products are configured with the following default private IP address:

**Default IP address:** 192.168.127.254

(IP addresses of the form 192.168.xxx.xxx are referred to as private IP addresses, since it is not possible to directly access a device configured with a private IP address from a public network. For example, you would not be able to ping such a device from an outside Internet connection. NE-4100 Series applications that require sending data over a public network, such as the Internet, require setting up the server with a valid public IP address, which can be leased from a local ISP.)

## NE-4100 Series Administration Suite

NE-4100 Series Administration Suite consists of some useful utility programs that are used to configure and manage your NE-4100 Series.

**See Chapter 7 for details on how to install NE-4100 Series Administration Suite, and how to use this suite of useful utilities to set up IP addresses and configure your NE-4100 Series.**

## ARP

You can make use of the ARP (Address Resolution Protocol) command to set up an IP address for your NE-4100 Series. The ARP command tells your computer to associate the NE-4100 Series' MAC address with the intended IP address. You must then use Telnet to access the NE-4100 Series, at which point the NE-4100 Series module's IP address will be reconfigured.

---

### ATTENTION



In order to use this setup method, both your computer and NE-4100 Series must be connected to the same LAN.

Or, you may use a cross-over Ethernet cable to connect the NE-4100 Series directly to your computer's Ethernet card.

Your NE-4100 Series must be configured with the factory default IP address—192.168.127.254—before executing the ARP command, as described below.

---


Take the following steps to use ARP to configure the IP address:

1. Obtain a valid IP address for your NE-4100 Series from your network administrator.
2. Obtain the NE-4100 Series' MAC address from the label on its bottom panel.
3. Execute the 'arp -s' command from your computer's MS-DOS prompt by typing:  
`arp -s 192.168.200.100 00-90-E8-xx-xx-xx`

This is where 192.168.200.100 is the new IP address and 00-90-E8-xx-xx-xx is the MAC address for your NE-4100 Series. You will need to change both numbers, as described above in points 1 and 2.

4. Next, execute a special Telnet command by typing:  
`telnet 192.168.200.100 6000`


After issuing this command, a **Connect failed** message will appear, as shown here. After the NE-4100 Series reboots, its IP address should be updated to the new address, and you can reconnect using either Telnet, Web, or Administrator to check that the update was successful.

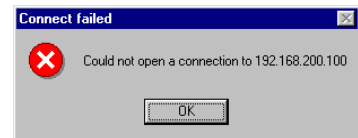

## Telnet Console

Depending on how your computer and network are configured, you may find it convenient to use network access to set up your NE-4100 Series' IP address. This can be done using the Telnet program.

1. From the Windows desktop, click on **Start** and then select **Run**.
2. Type `telnet 192.168.127.254` (use the correct IP address if different from the default) in the **Open** text input box, and then click **OK**.

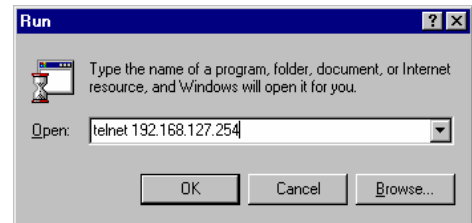

3. Type **2** to select **Network settings**, and then press **Enter**.

```
<< Main Menu >>
(1) Basic settings
(2) Network settings
(3) Serial settings
(4) DIO setting
(5) Operating settings
(6) Accessible IP settings
(7) Auto warning settings
(8) Monitor
(9) Ping
(a) Change password
(b) Load factory default
(u) View settings
(s) Save/Restart
(q) Quit

Key in your selection: 2_
```

4. Type **1** to select **IP address** and then press **Enter**.

```
<< Main Menu->Network settings >>
(1) IP address
(2) Netmask
(3) Gateway
(4) IP configuration
(5) DNS server 1
(6) DNS server 2
(7) SNMP
(8) SNMP community name
(9) SNMP contact
(a) SNMP location
(b) Auto IP report to IP
(c) Auto IP report to TCP port
(d) Auto IP report period
(u) View settings
(n) Back to main menu
(q) Quit

Key in your selection: 1
```

5. Use the **Backspace** key to erase the current IP address, type in the new IP address, and then press **Enter**.

```
<< Main Menu->Network settings >>
(1) IP address
(2) Netmask
(3) Gateway
(4) IP configuration
(5) DNS server 1
(6) DNS server 2
(7) SNMP
(8) SNMP community name
(9) SNMP contact
(a) SNMP location
(b) Auto IP report to IP
(c) Auto IP report to TCP port
(d) Auto IP report period
(u) View settings
(n) Back to main menu
(q) Quit

Key in your selection: 1
IP address: 192.168.127.254
```



6. Press any key to continue.

```
<< Main Menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to TCP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: 1
IP address: 192.168.127.254
Set IP address success

Press any key to continue...
```

7. Type **m** and then press **Enter** to return to the main menu.

```
<< Main Menu->Network settings >>
<1> IP address
<2> Netmask
<3> Gateway
<4> IP configuration
<5> DNS server 1
<6> DNS server 2
<7> SNMP
<8> SNMP community name
<9> SNMP contact
<a> SNMP location
<b> Auto IP report to IP
<c> Auto IP report to TCP port
<d> Auto IP report period
<v> View settings
<m> Back to main menu
<q> Quit

Key in your selection: m_
```

8. Type **s** and then press **Enter** to **Save/Restart** the system.

```
<< Main Menu >>
<1> Basic settings
<2> Network settings
<3> Serial settings
<4> DIO setting
<5> Operating settings
<6> Accessible IP settings
<7> Auto warning settings
<8> Monitor
<9> Ping
<a> Change password
<b> Load factory default
<v> View settings
<s> Save/Restart
<q> Quit

Key in your selection: s
```

9. Type **y** and then press **Enter** to save the new IP address and restart the NE-4100 Series board.

```
Ready to restart
<y> Yes
<n> No


Key in your selection: y_
```

## Serial Console (19200, n, 8, 1)

You may use the RS-232 console port to set up the IP address for NE-4100 Series. We suggest using MOXA PComm Terminal Emulator, which is available free of charge as part of the MOXA PComm Lite program suite, to carry out the installation procedure, although other similar utilities may also be used. (Please go to [www.moxa.com](http://www.moxa.com) to download the installation program for PComm Lite.)


Before you start to configure the NE-4100 Series via serial console, turn off the power and connect the serial cable from NE-4100 Series to your computer's serial port.

1. Connect the serial port located on the evaluation board (NE-4100T-ST or NE-4110-ST) for NE-4100 Series directly to your computer's male RS-232 serial port.
2. From the Windows desktop click on **Start → Programs → PComm Lite → Terminal Emulator**.
3. When the **PComm Terminal Emulator** window opens, first click on the **Port Manager** menu item and select **Open**, or simply click on the **Open** icon.

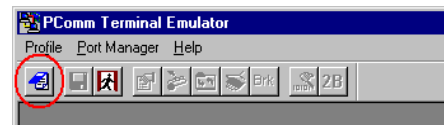


4. The **Property** window opens automatically. From the **Communication Parameter** page, select the appropriate COM port for the connection, **COM1** in this example, and **19200** for **Baud Rate**, **8** for **Data Bits**, **None** for **Parity**, and **1** for **Stop Bits**.
5. From the Property window's **Terminal** page, select **ANSI** or **VT100** for **Terminal Type** and then click **OK**.

If you select **Dumb Terminal** as the terminal type, some of the console functions—especially the “Monitor” function—may not work properly.

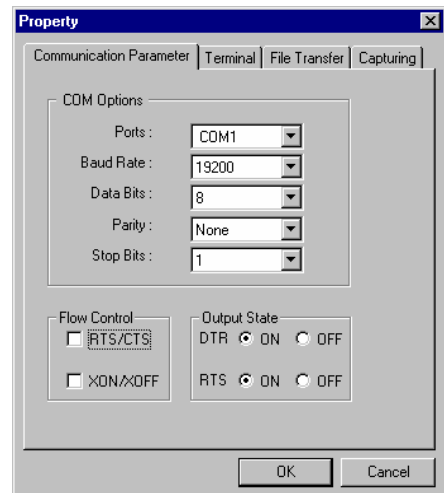

6. Type any character then auto switch from data mode to console mode.

7. Start configuring the IP address under **Networking Settings**. Refer to step 4, **Telnet Console**, for the rest of the IP settings.

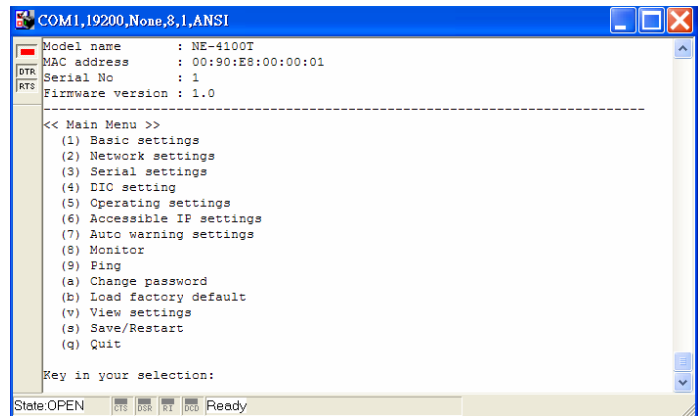



# 6

## Web Console Configuration


---

The Web Console is the most user-friendly way to configure NE-4100 Series. This chapter introduces the Web Console function groups and function definitions.

- ❑ **Opening Your Browser**
- ❑ **Basic Settings**
- ❑ **Network Settings**
- ❑ **Serial Settings**
- ❑ **Operating Settings**
  - TCP Server Mode
  - Real COM Mode
  - TCP Client Mode
  - UDP Mode
- ❑ **Accessible IP Settings**
- ❑ **Auto Warning Settings**
  - E-mail and SNMP Trap
  - Event Type
- ❑ **Digital IO**
- ❑ **Change Password**
- ❑ **Load Factory Default**
- ❑ **Save/Restart**

## Opening Your Browser

1. Open your browser with the cookie function enabled. (To enable your browser for cookies, right click on your desktop Internet Explorer icon, select Properties, click on the Security tab, and then select the three Enable options as shown in the figure below.)

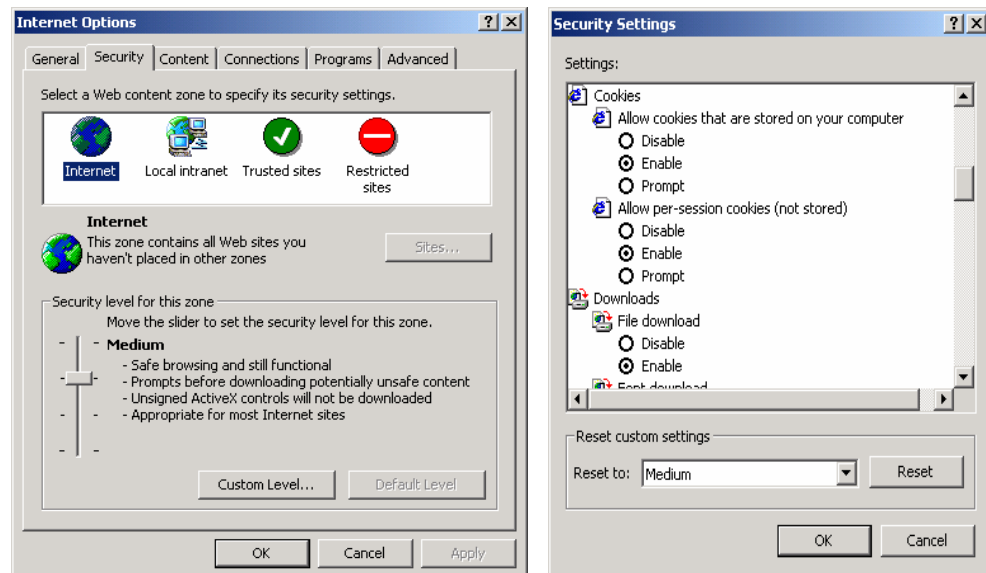

2. Type 192.168.127.254 in the **Address** box (use the correct IP address if different from the default), and then press **Enter**.

**ATTENTION** If you use other web browsers, remember to enable the functions to “allow cookies that are stored on your computer” or “allow per-session cookies.”




NE-4100 Series only uses cookies for “password” transmission.

**ATTENTION**



Refer to Chapter 5, “Initial IP Address Configuration,” for IP configuration. The examples used in this chapter use the Factory Default IP Address (192.168.127.254).

3. The NE-4100 Series homepage will open. On this page, you can see a brief description of the Web Console’s eleven function groups.

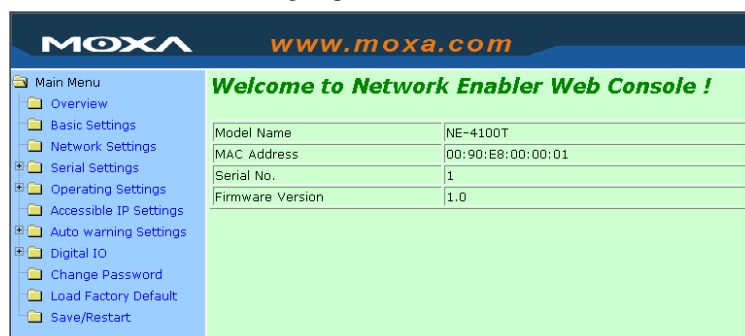

**ATTENTION**

If you can't remember the password, the **ONLY** way to start configuring NE-4100 Series is to load factory defaults by using the Reset button located near the evaluation boards' (NE-4100T-ST or NE-4110-ST) DB9 male Serial port.

Remember to use Windows Administrator to export the configuration file when you have finished the configuration. After using the Reset button to load factory defaults, your configuration can be easily reloaded into NE-4100 Series by using the Windows Administrator Import function. Refer to Chapter 7 for more details about using the Export and Import functions.

## Basic Settings

Click on the **Basic Settings** link on the left side of the screen to open the **Basic Settings** screen. Make necessary changes to the settings and click on **submit** to validate the modifications.

### Server name

Setting	Factory Default	Necessity
1 to 29 characters	NP[model name]_[Serial No.]	Optional

This option is useful for specifying the location or application of different NE-4100 Series boards.

### Time

NE-4100 Series has a built-in Real-Time Clock for time calibration functions. Functions such as Auto warning "Email" or "SNMP Trap" can add real-time information to the message.

**ATTENTION**

First time users should select the time zone first. The Console will display the "real time" according to the time zone compared to GMT.

If you would like to modify the real time clock, select "Local Time." NE-4100 Series' firmware will modify the GMT time according to the Time Zone.

### Time zone


Setting	Factory Default	Necessity
User selectable time zone	GMT (Greenwich Mean Time)	Optional

---

### Local time

Setting	Factory Default	Necessity
User adjustable time.	GMT (Greenwich Mean Time)	Optional

Click on the **Modify** button to open the **Modify time settings** window to input the correct local time.

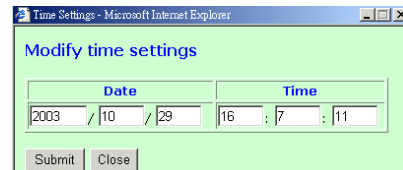

### Time server

Setting	Factory Default	Necessity
IP or Domain address (E.g., 192.168.1.1, time.stdtime.gov.tw, or time.nist.gov)	None	Optional

NE-4100 Series uses SNTP (RFC-1769) for auto time calibration.

Input the correct “Time Server” IP address or domain address. Once NE-4100 Series is configured with the correct Time Server address, NE-4100 Series will request time information from the “Time Server” every 10 minutes.

### Console

The “Disable” option for Web Console and Telnet Console is included for security reasons. In some cases, you may want to Disable one or both of these Console utilities as an extra precaution to prevent unauthorized users from accessing your NE-4100 Series. The factory default for both Web Console and Telnet Console is **Enable**.

Setting	Factory Default	Necessity
Enable or Disable	Enable	Required

---

#### ATTENTION



If you disable both the “Web Console” and “Telnet Console,” you can still use the Serial Console to configure NE-4100 Series locally, or Windows Administrator to configure NE-4100 Series either locally or remotely over the network.

---



## Network Settings

Click on the **Network Settings** link on the left side of the screen to open the **Networking Settings** screen. Make necessary changes to the settings and click on **Submit** to validate the modifications.

You must assign a valid IP address to NE-4100 Series before it will work in your network environment. Your network system administrator should provide you with an IP address and related settings for your network. The IP address must be unique within the network (otherwise, NE-4100 Series will not have a valid connection to the network). First time users can refer to Chapter 5, *Initial IP address Configuration*, for more information.

You can choose from four possible IP Configuration modes—**Static**, **DHCP**, **DHCP/BOOTP**, and **BOOTP**—located under the web console screen's IP configuration drop-down box.

Method	Function Definition
Static	User defined IP address, Netmask, Gateway.
DHCP	DHCP Server assigned IP address, Netmask, Gateway, DNS, and Time Server
DHCP/BOOTP	DHCP Server assigned IP address, Netmask, Gateway, DNS, and Time Server, or BOOTP Server assigned IP address
BOOTP	BOOTP Server assigned IP address

### IP Address

Setting	Factory Default	Necessity
E.g., 192.168.1.1 (IP addresses of the form <i>x.x.x.0</i> and <i>x.x.x.255</i> are invalid.)	192.168.127.254	Required

An IP address is a number assigned to a network device (such as a computer) as a permanent address on the network. Computers use the IP address to identify and talk to each other over the network. Choose a proper IP address which is unique and valid in your network environment.

---

### *Netmask*

Setting	Factory Default	Necessity
E.g., 255.255.255.0	255.255.0.0	Required

A subnet mask represents all the network hosts at one geographic location, in one building, or on the same local area network. When a packet is sent out over the network, the NE-4100 Series will use the subnet mask to check whether the desired TCP/IP host specified in the packet is on a local network segment. If the address is on the same network segment as the NE-4100 Series, a connection is established directly from the NE-4100 Series board. Otherwise, the connection is established through the given default gateway.

### *Gateway*

Setting	Factory Default	Necessity
E.g., 192.168.1.1	None	Optional

A gateway is a network gateway that acts as an entrance to another network. Usually, the computers that control traffic within the network or at the local Internet service provider are gateway nodes. NE-4100 Series needs to know the IP address of the default gateway computer in order to communicate with the hosts outside the local network environment. For correct gateway IP address information, consult the network administrator.

### *IP Configuration*

Setting	Factory Default	Necessity
Static	Static	Required
DHCP		
DHCP/BOOTP		
BOOTP		

---

#### **ATTENTION**



In Dynamic IP environments, the firmware will retry 3 times every 30 seconds until network settings are assigned by the DHCP or BOOTP server. The Timeout for each try increases from 1 second, to 3 seconds, to 5 seconds.

If the DHCP/BOOTP Server is unavailable, the firmware will use the default IP address, 192.168.127.254, Netmask, and Gateway for IP settings.

---

### *DNS server 1 / DNS sever 2*

Setting	Factory Default	Necessity
E.g., 192.168.1.1 (IP addresses of the form <i>x.x.x.0</i> and <i>x.x.x.255</i> are invalid.)	None	Optional

When the user wants to visit a particular website, the computer asks a Domain Name System (DNS) server for the website's correct IP address, and the computer users the response to connect to the web server. DNS is the way that Internet domain names are identified and translated into IP addresses. A domain name is an alphanumeric name, such as *moxa.com*, that it is usually easier to remember. A DNS server is a host that translates this kind of text-based domain name into the numeric IP address used to establish a TCP/IP connection.

In order to use NE-4100 Series' DNS feature, you need to set the IP address of the DNS server to be able to access the host with the domain name. NE-4100 Series provides **DNS server 1** and **DNS server 2** configuration items to configure the IP address of the DNS server. DNS Server 2 is included for use when DNS sever 1 is unavailable.

NE-4100 Series plays the role of DNS client. Functions that support domain name in NE-4100 Series are **Time Sever IP Address**, **TCP Client-Destination IP Address**, **Mail Server**, **SNMP Trap IP Address**, and **IP Location Server**.

## SNMP Settings

### *Community Name*

Setting	Factory Default	Necessity
1 to 39 characters (E.g., Support, 886-89191230 #300)	public	Optional

A community name is a plain-text password mechanism that is used to weakly authenticate queries to agents of managed network devices.

### *Contact*

Setting	Factory Default	Necessity
1 to 39 characters (E.g., Support, 886-89191230 #300)	None	Optional

The SNMP contact information usually includes an emergency contact name and telephone or pager number.

### *Location*

Setting	Factory Default	Necessity
1 to 39 characters (E.g., Floor 1, office 2)	None	Optional

Specify the location string for SNMP agents such as NE-4100 Series. This string is usually set to the street address where the NE-4100 Series is physically located.

## IP Address Report

When NE-4100 Series products are used in a dynamic IP environment, users must spend more time with IP management tasks. For example, NE-4100 Series works as a server (TCP or UDP), and the host, which acts as a client, must know the IP address of the server. If the DHCP server assigns a new IP address to the server, the host must take care of what happens when the IP changes.

NE-4100 Series products help out by periodically reporting their IP address to the IP location server, in case the dynamic IP has changed. The parameters shown below are used to configure the Auto IP report function. There are two ways to develop an “Auto IP report Server” to receive NE-4100 Series’ Auto IP report.

1. Use NE-4100 Series Administrator’s IP Address Report function.
2. Refer to Appendix C for the “Auto IP report protocol” to develop your own software.

### *Auto report to IP*

Setting	Factory Default	Necessity
E.g., 192.168.1.1 or URL (IP addresses of the form <i>x.x.x.0</i> and <i>x.x.x.255</i> are invalid.)	None	Optional

Reports generated by the Auto report function will be sent automatically to this IP address.

#### *Auto report to TCP port*


Setting	Factory Default	Necessity
E.g., 4001	4002	Optional

#### *Auto report period*

Setting	Factory Default	Necessity
Time interval (in seconds)	10	Optional

## Serial Settings

Click on the **Serial Settings** link on the left side of the screen to display serial settings. Make necessary changes to the settings and click on **submit** to validate the modifications.

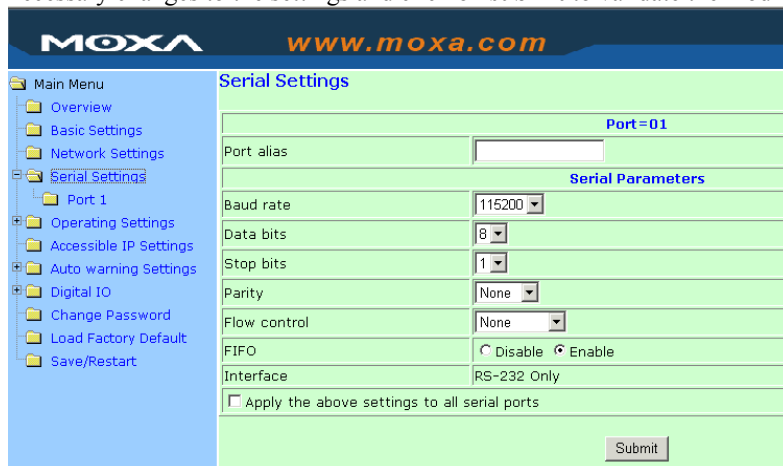

#### *Port alias*

Setting	Factory Default	Necessity
1 to 20 characters (E.g., PLC-No.1)	None	Optional

Port Alias is specially designed to allow easy identification of the serial devices which are connected to NE-4100 Series' serial port.

#### **Serial Parameters**

#### **ATTENTION**



Check the serial communication parameters in your Serial Device's user's manual. You should set up NE-4100 Series' serial parameters with the same communication parameters used by your serial devices.

#### *Baud rate*

Setting	Factory Default	Necessity
50 bps to 115.2 Kbps	115.2 Kbps	Required

NE-4100 Series supports a baud rate setting from 50 bps to 115.2 Kbps.

**Data bits**

Setting	Factory Default	Necessity
5, 6, 7, 8	8	Required

When the user sets Data bits to 5 bits, the stop bits setting will automatically change to 1.5 bits.

**Stop bits**

Setting	Factory Default	Necessity
1, 2	1	Required

Stop bits will be set to 1.5 when Data bits is set to 5 bits.

**Parity**

Setting	Factory Default	Necessity
None, Even, Odd, Space, Mark	None	Required

**Flow control**

Setting	Factory Default	Necessity
None, RTS/CTS, DTR/DSR, Xon/Xoff	RTS/CTS	Required

**FIFO**

Setting	Factory Default	Necessity
Enable, Disable	Enable	Required

NE-4100 Series' serial ports provide a 16-byte FIFO both in the Tx and Rx directions. Disable the FIFO setting when your serial device does not have a FIFO to prevent data loss during communication.

## Operating Settings

Click on the **Operating Settings** link on the left side of the screen to display operating settings. Make necessary changes to the settings and then click on **Submit** to validate the modifications.

## TCP Server Mode

The screenshot shows the Moxa NE-4100 web interface. The left sidebar contains a tree view with the following items: Main Menu, Overview, Basic Settings, Network Settings, Serial Settings, Port 1, Operating Settings (selected), Accessible IP Settings, Auto warning Settings, Digital IO, Change Password, Load Factory Default, and Save/Restart. The main content area is titled 'Operating Settings' and shows configuration for 'Port=01'. The configuration fields are: Operation mode (TCP Server Mode), TCP alive check time (7 min), Inactivity time (0 ms), Max connection (1), Data Packing (Delimiter 1: A, Delimiter 2: 0, Force transmit: 0), and TCP Server Mode (Local TCP port: 4001, Command port: 966). A 'Submit' button is located at the bottom right of the configuration area.

### *TCP alive check time*

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NE-4100 series automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, NE-4100 series starts listening for another host's TCP connection.

### *Inactivity time*

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0 ms: TCP connection is not closed due to an idle serial line.

0-65535 ms: NE-4100 series automatically closes the TCP connection if there is no serial data activity for the given time. After the connection is closed, NE-4100 series starts listening for another host's TCP connection.

This parameter defines the maintenance status as Closed or Listen on the TCP connection. The connection is closed if there is no incoming or outgoing data through the serial port during the specific Inactivity time.

If the value of inactivity time is set to 0, the current TCP connection is maintained until there is a connection close request. Although inactivity time is disabled, the NE-4100 series will check the connection status between the NE-4100 series and remote host by sending "keep alive" packets periodically. If the remote host does not respond to the packet, it assumes that the connection was closed down unintentionally. NE-4100 series will then force the existing TCP connection to close.

### ATTENTION



The Inactivity time should at least be set larger than that of Force Transmit timeout. To prevent the unintended loss of data due to the session disconnected, it is highly recommended that this value is set large enough so that the intended data transfer is completed.

**Max Connection**

Setting	Factory Default	Necessity
1, 2, 3, 4	1	Required

*Max Connection* is usually used when the user needs to receive data from different hosts simultaneously. The factory default only allows 1 connection at a time.

**Max. Connection 1:**

NE-4100 series only allows 1 host to open the TCP connection to the specific serial port.

**Max Connection 2 to 4:**

Allows requests from between 2 and 4 host's TCP connection to open the specific NE-4100 series serial port, at the same time. When multiple hosts establish a TCP connection to the specific serial port at the same time, NE-4100 series will duplicate the serial data and transmit to all of the hosts. Ethernet data is sent on a first-in-first-out basis to the serial port when data comes into NE-4100 series from the Ethernet interface.

**Delimiter 1**

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 series receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NE-4100 series' Ethernet port.

**Delimiter 2**

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 series receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NE-4100 series' Ethernet port.

**ATTENTION**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1K, the NE-4100 series will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

**Force Transmit**

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NE-4100 series' TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the time interval during which NE-4100 series fetches the serial data from its internal buffer. If there data is being received through the serial port, NE-4100 series stores the data in its internal buffer. NE-4100 series transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified as Force Transmit timeout.

Optimal force transmit timeout differs according to your application, but it must be at least as large as one character interval within the specified baud rate. For example, assume that the serial port is set to

1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits required to send a character is 10 bits and the time required to transfer one character is

$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms}$ .

Therefore, you should set Force Transmit timeout to be larger than 8.3 ms. Force Transmit timeout is specified in milliseconds and must be larger than 10 ms.

If the user wants to send a series of characters in a packet, the serial device attached to NE-4100 series should send characters without time delay larger than the Force Transmit timeout between characters, and the total length of data must be smaller than or equal to NE-4100 series' internal buffer size. NE-4100 series' serial communication buffer size is 1 Kbytes per port.

#### Local TCP port

Setting	Factory Default	Necessity
1 to 65535	4001	Required

The TCP port that NE-4100 series uses to listen to connections, and that other devices must use to contact NE-4100 series. To avoid conflicts with well known TCP ports, the default is set to 4001.

#### Command port

Setting	Factory Default	Necessity
1 to 65535	966	Optional

The command port is a listen TCP port for IP-Serial Lib commands from the host. In order to prevent a TCP port conflict with other applications, the user can adjust the command port to another port if needed. And IP-Serial Lib will automatically check out the Command Port on NE-4100 series so that the user does not need to configure the program.

## Real COM Mode

#### TCP alive check time

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NE-4100 series automatically closes the TCP connection if there is no TCP activity for the given time. After the connection is closed, NE-4100 series starts listening for another Real COM driver's connection from another host.



**Max Connection**

Setting	Factory Default	Necessity
1, 2, 3, 4	1	Required

**Max Connection** is usually used when the user needs to receive data from different hosts simultaneously. The factory default only allows 1 connection at a same. When Max Connection is set to 1, the Real COM driver on the specific host has full control.

**Max. Connection 1:**

Allows only 1 host's Real COM driver to open the specific NE-4100 series serial port.

**Max Connection 2 to 4:**

Allows 2 to 4 host's Real COM drivers to open the specific NE-4100 series serial port, at the same time. When multiple hosts' Real COM drivers open the serial port at the same time, the COM driver only provides a pure data tunnel without control ability.

Application software that is based on the COM driver will receive a driver response of "success" when the software uses any of the Win32 API functions. The firmware will only send the data back to the driver on the host.

Data will be sent first-in-first-out when data comes into the NE-4100 series from the Ethernet interface.

**ATTENTION**

When Max Connection is not 1, it also means that NE-4100 series will be in "multi connection application." In the "multi connection application," when one of two to four hosts closes the COM port, NE-4100 series will suspend receiving or sending serial data until the host successfully closes the COM port.

In multi connection applications, NE-4100 series will use the serial communication parameters set in the console. If the host opens the COM with parameters different from NE-4100 series' console setting, data communication may not work properly.

**Delimiter 1**

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 series receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NE-4100 series' Ethernet port.

**Delimiter 2**

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 series receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NE-4100 series' Ethernet port.

**ATTENTION**

Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1K, the NE-4100 series will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

### Force Transmit

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NE-4100 series' TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the time interval during which NE-4100 series fetches the serial data from its internal buffer. If data is incoming through the serial port, NE-4100 series stores the data in the internal buffer. NE-4100 series transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified under Force Transmit timeout.

Optimal force transmit timeout differs according to your application, but it must be at least larger than one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits needed to send a character is 10 bits, and the time required to transfer one character is

$$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force Transmit timeout to be larger than 8.3 ms. Force Transmit timeout is specified in milliseconds and must be larger than 10 ms.

If the user wants to send the series of characters in a packet, the serial device attached to NE-4100 series should send characters without time delay larger than Force Transmit timeout between characters and the total length of data must be smaller than or equal to NE-4100 series' internal buffer size. The serial communication buffer size of NE-4100 series is 1 Kbytes per port.

## TCP Client Mode

### TCP alive check time

Setting	Factory Default	Necessity
0 to 99 min	7 min	Optional

0 min: TCP connection is not closed due to an idle TCP connection.

1 to 99 min: NE-4100 Series automatically closes the TCP connection if there is no TCP activity for the given time.

#### *Inactivity time*

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0 ms: TCP connection is not closed due to an idle serial line.

0-65535 ms: NE-4100 Series automatically closes the TCP connection, if there is no serial data activity for the given time.

This parameter defines the maintenance status as Closed or Listen on the TCP connection. The connection is closed if there is no incoming or outgoing data through the serial port during the specific Inactivity time.

If the value of inactivity time is set to 0, the current TCP connection is maintained until a connection close request is received. Although the inactivity time is disabled, the NE-4100 Series will check the connection status between the NE-4100 Series and remote host by sending “keep alive” packets periodically. If the remote host does not respond to the packets, it treats the connection as being down unintentionally. NE-4100 Series will then force the existing TCP connection to close.

#### ATTENTION



The Inactivity time should at least be set larger than that of the Force Transmit timeout. To prevent the unintended loss of data due to the session being disconnected, it is highly recommended that this value is set large enough so that the intended data transfer is completed.

#### ATTENTION



Inactivity time is ONLY active when “TCP connection on” is set to “Any character.”

#### *Delimiter 1*

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 Series receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NE-4100 Series' Ethernet port.

#### *Delimiter 2*

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 Series receives both delimiters through its serial port, it immediately packs all data currently in its buffer and sends it out the NE-4100 Series' Ethernet port.

#### ATTENTION



Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1K, the NE-4100 Series will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

#### *Force Transmit*

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

---

0: Disable the force transmit timeout.

1 to 65535: Forces the NE-4100 Series' TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

This parameter defines the interval during which NE-4100 Series fetches the serial data from its internal buffer. If there is incoming data through the serial port, NE-4100 Series stores data in the internal buffer. NE-4100 Series transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified as Force Transmit timeout.

Optimal force transmit timeout differs according to your application, but it must be at least as large as one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits required to send a character is 10 bits, and the time required to transfer one character is

$$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set Force Transmit timeout to be larger than 8.3 ms. Force Transmit timeout is specified in milliseconds and must be larger than 10 ms.

If the user wants to send a series of characters in a packet, the serial device attached to NE-4100 Series should send characters without time delay larger than Force Transmit timeout between characters and the total length of data must be smaller than or equal to NE-4100 Series' internal buffer size. The serial communication buffer size of NE-4100 Series is 1 Kbytes per port.

#### ***Destination IP address 1***

Setting	Factory Default	Necessity
IP address or Domain Address (E.g., 192.168.1.1)	None	Required

Allows NE-4100 Series to connect actively to the remote host whose address is set by this parameter.

#### ***Destination IP address 2/3/4***

Setting	Factory Default	Necessity
IP address or Domain Address (E.g., 192.168.1.1)	None	Optional

Allows NE-4100 Series to connect actively to the remote host whose address is set by this parameter.

---

#### **ATTENTION**



Up to 4 connections can be established between NE-4100 Series and hosts. The connection speed or throughput may be low if one of the four connections is slow. In this case, the other 3 connections will be delayed while waiting for the slowest connection to finish transmitting or receiving.

---

#### **ATTENTION**



The "Destination IP address" parameter can use both IP address and Domain address. For some applications, the user may need to send the data actively to the remote destination domain address.

---

#### ***TCP connection***

Setting	Factory Default	Necessity
Start up, Any character	None	Optional

Start up: Attempts to establish a TCP connection as soon as the NE-4100 Series is powered on.

Any Character: Attempts to establish a TCP connection as soon as the NE-4100 Series starts receiving serial data.

## UDP Mode

The screenshot shows the 'Operating Settings' page for Port 1 in UDP Mode. The left sidebar contains a navigation menu with options like Main Menu, Overview, Basic Settings, Network Settings, Serial Settings, and Operating Settings. The main content area is titled 'Operating Settings' and 'Port = 01'. It includes fields for 'Operation mode' (set to UDP Mode), 'Data Packing' (Delimiter 1: 'A' (Hex) with 'Enable' checked, Delimiter 2: '0' (Hex) with 'Enable' unchecked), and 'Force transmit' (set to '0' with a range of 0 - 65535 ms). Below this is a table for 'UDP Mode' with columns 'Begin', 'End', and 'Port'. It lists four destination IP addresses (192.168.2.95) and their corresponding ports (4001, 4002, 4003, 4004). A 'Local Listen port' is set to 4001. There is a checkbox for 'Apply the above settings to all serial ports' and a 'Submit' button at the bottom.

### Delimiter 1

Setting	Factory Default	Necessity
00 to FF	None	Optional

### Delimiter 2

Setting	Factory Default	Necessity
00 to FF	None	Optional

Once the NE-4100 Series receives both delimiters through the serial port, it immediately packs all data currently in its buffer and sends it to the NE-4100 Series' Ethernet port.

Note: Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer.

#### ATTENTION



Delimiter 2 is optional. If left blank, then Delimiter 1 alone trips clearing of the buffer. If the size of the serial data received is greater than 1K, the NE-4100 Series will automatically pack the data and send it to the Ethernet. However, to use the delimiter function, you must at least enable Delimiter 1. If Delimiter 1 is left blank and Delimiter 2 is enabled, the delimiter function will not work properly.

### Force Transmit

Setting	Factory Default	Necessity
0 to 65535 ms	0 ms	Optional

0: Disable the force transmit timeout.

1 to 65535: Forces the NE-4100 Series' TCP/IP protocol software to try to pack serial data received during the specified time into the same data frame.

---

This parameter defines the interval during which NE-4100 Series fetches the serial data from its internal buffer. If there is incoming data through the serial port, NE-4100 Series stores the data in the internal buffer. NE-4100 Series transmits data stored in the buffer via TCP/IP, but only if the internal buffer is full or if the force transmit time interval reaches the time specified as Force Transmit timeout.

Optimal force transmit timeout differs according to your application, but it must be at least as large as one character interval within the specified baud rate. For example, assume that the serial port is set to 1200 bps, 8 data bits, 1 stop bit, and no parity. In this case, the total number of bits required to send a character is 10 bits and the time required to transfer one character is

$$(10 \text{ (bits)} / 1200 \text{ (bits/s)}) * 1000 \text{ (ms/s)} = 8.3 \text{ ms.}$$

Therefore, you should set the Force Transmit timeout to be larger than 8.3 ms. Force Transmit timeout is specified in milliseconds and must be larger than 10 ms.

If the user wants to send a series of characters in a packet, the serial device attached to NE-4100 Series should send characters without time delay larger than Force Transmit timeout between characters and the total length of data must be smaller than or equal to NE-4100 Series' internal buffer size. The serial communication buffer size of NE-4100 Series is 1 Kbyte per port.

***Destination IP address 1***

Setting	Factory Default	Necessity
IP address range E.g.,     Begin: 192.168.1.1 End:  192.168.1.10	None	Required

***Destination IP address 2/3/4***

Setting	Factory Default	Necessity
IP address range E.g.,     Begin: 192.168.1.11 End:  192.168.1.20	None	Optional

***Local listen port***

Setting	Factory Default	Necessity
1 to 65535	4001	Required

The UDP port that NE-4100 Series listens to, and that other devices must use to contact NE-4100 Series. To avoid conflicts with well known UDP ports, the default is set to 4001.

## Accessible IP Settings

Click on the **Accessible IP Settings** link on the left side of the screen to display serial settings. Make necessary changes to the settings and click on **Submit** to validate the modifications.

**MOXA** [www.moxa.com](http://www.moxa.com)

**Accessible IP Settings**

☐ Enable the accessible IP list ( "Disable" will allow all IP's connection request.)

No.	Active the rule	IP Address	IP Netmask
1	<input type="checkbox"/>		
2	<input type="checkbox"/>		
3	<input type="checkbox"/>		
4	<input type="checkbox"/>		
5	<input type="checkbox"/>		
6	<input type="checkbox"/>		
7	<input type="checkbox"/>		
8	<input type="checkbox"/>		
9	<input type="checkbox"/>		
10	<input type="checkbox"/>		
11	<input type="checkbox"/>		
12	<input type="checkbox"/>		
13	<input type="checkbox"/>		
14	<input type="checkbox"/>		
15	<input type="checkbox"/>		

NE-4100 Series has an IP address based filtering method to control access to the NE-4100 Series.

Accessible IP Settings allows you to add or remove “Legal” remote host IP addresses to prevent unauthorized access. Access to NE-4100 Series is controlled by IP address. That is, if a host’s IP address is in the accessible IP table, then the host will be allowed access to the NE-4100 Series. You can allow one of the following cases by setting the parameter.

- **Only one host with a specific IP address can access the NE-4100 Series**

Enter “IP address/255.255.255.255” (e.g., “192.168.1.1/255.255.255.255”).

- **Hosts on a given subnet can access the NE-4100 Series**

Enter “IP address/255.255.255.0” (e.g., “192.168.1.0/255.255.255.0”).

- **Any host can access the NE-4100 Series**

Disable this function. Refer to the following table for more details about the configuration example.

Allowable Hosts	Input format
Any host	Disable
192.168.1.120	192.168.1.120 / 255.255.255.255
192.168.1.1 to 192.168.1.254	192.168.1.0 / 255.255.255.0
192.168.0.1 to 192.168.255.254	192.168.0.0 / 255.255.0.0
192.168.1.1 to 192.168.1.126	192.168.1.0 / 255.255.255.128
192.168.1.129 to 192.168.1.254	192.168.1.128 / 255.255.255.128

## Auto Warning Settings

Click on the **Auto Warning Settings** link on the left side of the screen to display serial settings. Make necessary changes to the settings and click on **Submit** to validate the modifications.

### E-mail and SNMP Trap



#### Mail Server

##### *Mail Server*

Setting	Factory Default	Necessity
IP or Domain Name	None	Optional

##### *User Name*

Setting	Factory Default	Necessity
1 to 15 characters	None	Optional

##### *Password*

Setting	Factory Default	Necessity
1 to 15 characters	None	Optional

##### *From E-mail address*

Setting	Factory Default	Necessity
1 to 63 characters	None	Optional

##### *E-mail address 1/2/3/4*

Setting	Factory Default	Necessity
1 to 63 characters	None	Optional

#### ATTENTION



Consult your Network Administrator or ISP for the proper mail server settings. The Auto warning function may not work properly if not set up properly. NE-4100 Series SMTP AUTH supports LOGIN, PLAIN, CRAM-MD5 (RFC 2554).



## SNMP Trap Server

*SNMP trap server IP or domain name*

Setting	Factory Default	Necessity
IP or Domain Name	None	Optional

## Event Type

The screenshot shows the Moxa Web Console interface. On the left is a navigation menu with options like Main Menu, Overview, Basic Settings, Network Settings, Serial Settings, Port 1, Operating Settings, Accessible IP Settings, Auto warning Settings, E-mail and SNMP Trap, Event Type (selected), Digital IO, Change Password, Load Factory Default, and Save/Restart. The main area is titled 'Event Type' and contains a table for configuring event notifications. The table has three columns: Event Name, Mail, and Trap. The events listed are Cold start, Warm start, Authentication failure, IP address changed, Password changed, DCD changed, and DSR changed. For each event, there are checkboxes for Mail and Trap. A 'Submit' button is at the bottom right.

Event Name	Mail	Trap
Cold start	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Warm start	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Authentication failure	<input type="checkbox"/>	<input type="checkbox"/>
IP address changed	<input type="checkbox"/>	<input type="checkbox"/>
Password changed	<input type="checkbox"/>	<input type="checkbox"/>
<b>DCD changed</b>		
Port	<input type="checkbox"/>	<input type="checkbox"/>
Port 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<b>DSR changed</b>		
Port	<input type="checkbox"/>	<input type="checkbox"/>
Port 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

### ***Cold start***

This refers to starting the system from power off (contrast this with warm start). When performing a cold start, NE-4100 Series will automatically issue an Auto warning message by e-mail, or send an SNMP trap after rebooting.

### ***Warm start***

This refers to restarting the computer without turning the power off. It's the opposite of cold start. When performing a warm start, NE-4100 Series will automatically send an e-mail, or send an SNMP trap after rebooting.

### ***Authentication failure***

The user inputs a wrong password from the Console or Administrator. When authentication failure occurs, NE-4100 Series will immediately send an e-mail or send an SNMP trap.

### ***IP address changed***

The user has changed NE-4100 Series' IP address. When the IP address changes, NE-4100 Series will send an e-mail with the new IP address before NE-4100 Series reboots. If the NE-4100 Series fails to send mail to the mail server after 15 seconds, NE-4100 Series will be rebooting directly and abort the mail auto warning.

### ***Password changed***

The user has changed NE-4100 Series' password. When the password changes, NE-4100 Series will send an e-mail with the password change notice before NE-4100 Series reboots. If the NE-4100 Series fails to send mail to the mail server after 15 seconds, NE-4100 Series will be rebooting directly and abort the mail auto warning.

### **DCD changed**

The DCD (Data Carrier Detect) signal has changed, also indicating that the modem connection status has changed. For example, a DCD change to high also means "Connected" between local modem and remote modem. If the DCD signal changes to low, it also means that the connection line is down.

---

When the DCD changes, NE-4100 Series will immediately send an e-mail or send an SNMP trap.

## DSR changed

The DSR (Data Set Ready) signal has changed, also indicating that the data communication equipment's power is off. For example, a DSR change to high also means that the DCE is powered ON. If the DSR signal changes to low, it also means that the DCE is powered off.

When the DSR changes, NE-4100 Series will immediately send an e-mail or send an SNMP trap.

### *Mail*

Setting	Factory Default	Necessity
Enable, Disable	Disable	Optional

This feature helps the administrator manage the NE-4100 Series. NE-4100 Series sends mail to pre-defined mail boxes when the enabled events—such as Cold start, Warm start, Authentication failure, etc.—occur. To configure this feature, click on the event type box.

### *Trap*

Setting	Factory Default	Necessity
Enable, Disable	Disable	Optional

This feature helps the administrator manage the NE-4100 Series. NE-4100 Series sends SNMP Trap to a pre-defined SNMP Trap server when the enabled events—such as Cold start, Warm start, Authentication failure, etc.—occur. To configure this feature, you need to click on the event type box.

---

#### ATTENTION




**DCD changed** and **DSR changed** events are only supported by those models that have these two signals.

---


## Digital IO

Click on the **Digital IO** link on the left side of the screen to open the **Digital IO Settings** window. There are 2 options for selecting DIO modes: **IN** and **OUT**. When you set the mode to **IN**, you will not be able to set the **Status** to **H** or **L**. You can only monitor the DIOs' status. But when you set the mode to **OUT**, you can configure the **Status** to **H** or **L**. Make necessary changes to the settings and click on **submit** to validate the modifications.

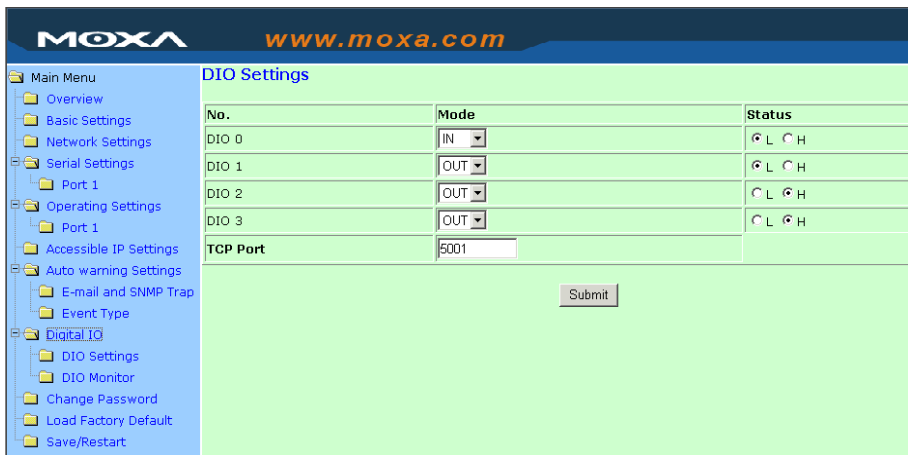

## DIO Monitor

You can monitor the DIO status from the web page shown below. To do so, click on the **DIO Monitor** link on the left side of the screen to open the **DIO Monitor** window.

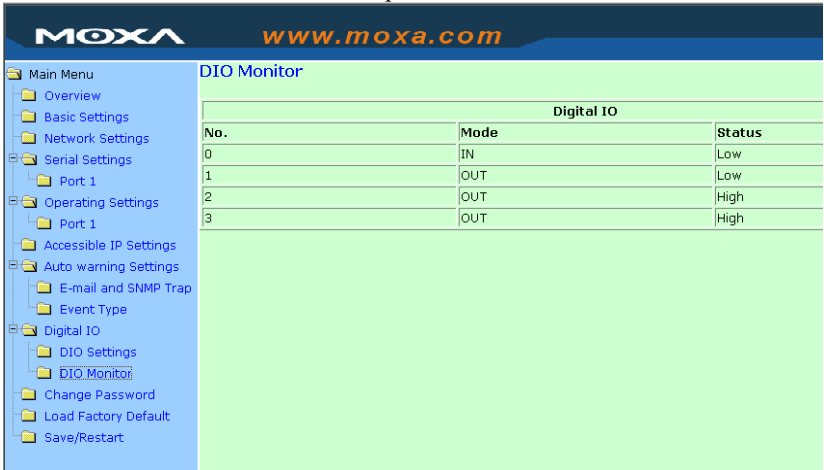

## Change Password

Click on the **Change Password** link on the left side of the screen to display the **Change Password** window. Make necessary changes to the settings and click on **Submit** to validate the modifications.

The screenshot shows the Moxa web interface at www.moxa.com. On the left is a 'Main Menu' sidebar with a tree structure including Overview, Basic Settings, Network Settings, Serial Settings (with sub-items Port 1, Operating Settings, Accessible IP Settings, Auto warning Settings, E-mail and SNMP Trap, Event Type, Digital IO, DIO Settings, DIO Monitor, Change Password, Load Factory Default, and Save/Restart), and Save/Restart. The main content area is titled 'Change password' and contains three text input fields labeled 'Old password:', 'New password:', and 'Retype password:'. A 'Submit' button is located to the right of these fields.

Input the “Old password” and “New password” to change the password. Leave the password boxes blank to erase the password. In this case, the NE-4100 Series will not have password protection.



If you forget the password, the **ONLY** way to configure NE-4100 Series is by using the Reset button on NE-4100 Series’ evaluation boards to “Load Factory Default.”

Remember to export the configuration file using Windows Administrator when you finish the configuration. By using the Import function of Windows Administrator, your configuration can be re-loaded into NE-4100 Series after using “Load Factory Default.” Refer to Chapter 7 for more details about the Export and Import function.

## Load Factory Default Settings

To load the factory default settings, click on the **Load Factory Default** link on the left side of the screen and then click on **Submit** to restore the factory default settings. Note that by doing so the modifications you made before will be lost.

The screenshot shows the Moxa web interface at www.moxa.com. The left sidebar is identical to the previous screenshot. The main content area is titled 'Load Factory Default' and contains a warning message: 'This function will reset all Network Enabler Server settings to their factory default values. Be aware that previous settings will be lost.' Below the message is a 'Submit' button.

## Save/Restart

Click on the **Restart** link on the left side of the screen if you would like to restart the configuration. After all changes have been made and applied, click on **Save** to exit the system.

## Configuring Windows Administrator

---

In addition to using Web Console, Serial Console, and Telnet Console to configure NE-4100 Series, another useful configuration tool that can be used is Network Enabler Administrator. In this chapter, we will discuss how to use Network Enabler Administrator to configure your NE-4100 Series.

This chapter includes the following sections:

- ❑ **Overview**
- ❑ **Installing Network Enabler Administrator**
- ❑ **Starting Configuration**
  - Broadcast Search
  - Unlock Password Protection
  - Configuring NE-4100 Series
  - Upgrading Firmware
  - Export/Import
- ❑ **Monitor**
- ❑ **Port Monitor**
- ❑ **COM Mapping**
  - On-line COM Mapping
  - Off-line COM Mapping

---


## Overview

We understand the importance of software as the foundation of your application, and with this in mind, we designed NE-4100 Series Network Enabler Administrator to let you easily install and configure your NE-4100 Series products over the network. NE-4100 Series Network Enabler Administrator provides five function groups that ease the installation process, allows off-line COM mapping, and provides monitoring and IP location server functions.


NE-4100 Series Network Enabler Administrator is an integrated software suite that bundles NE-4100 Series Administrator and the IP Serial Library, and provides everything you need to remotely manage, monitor, and modify your NE-4100 Series—hassle free.

## Installing Network Enabler Administrator


1. Once the Setup program starts running, click on **Yes** to proceed.

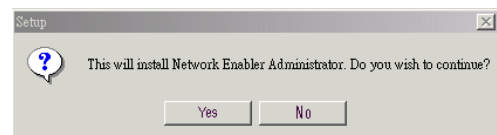


2. Click on **Next** when the **Welcome** window opens to proceed with the installation.

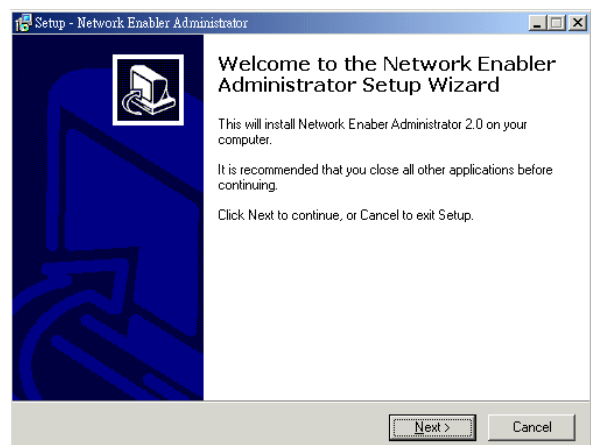


3. Click on **Next** when the Select Additional Tasks window opens to proceed with the installation.

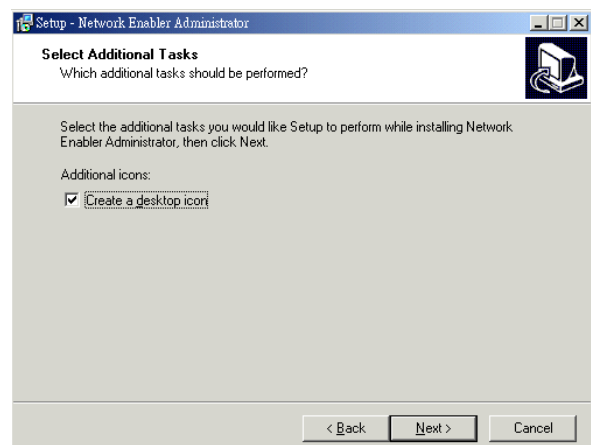


- Click on **Instatl** to install program files in the default directory, or select an alternative location.

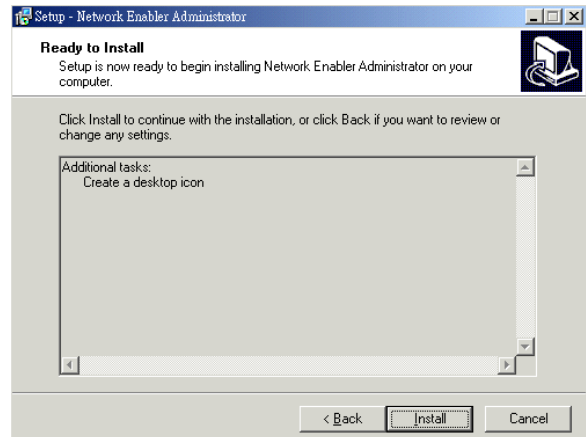

- The **Installing** window reports the progress of the installation.

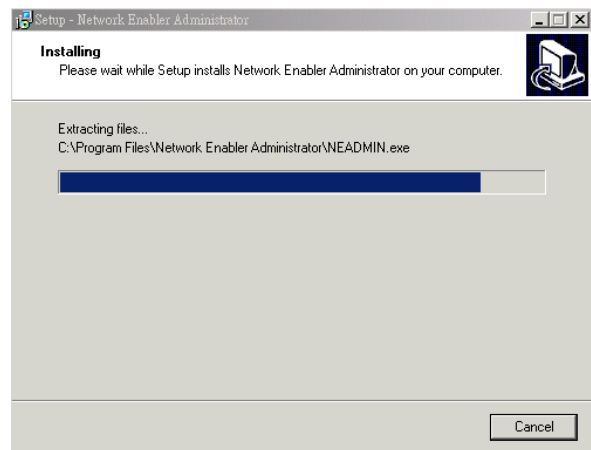


- Click on **Finish** to complete the installation of NE-4100 Series Network Enabler Administrator Suite.

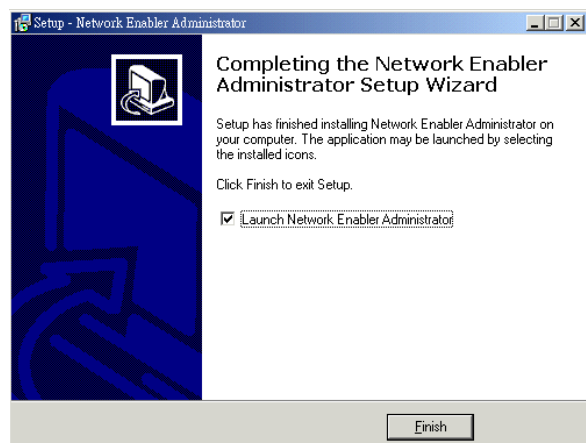

## Starting Configuration

The Network Enabler Administrator-Configuration window is divided into four parts.

- The top part is the function list and online help area. (Windows NT does not support this .chm file format.)
- The left part lists the five Administrator function groups.
- The right part provides the NE-4100 Series list, which can be selected to process user requirements.
- The bottom part is the Log area, which shows useful messages that record the user's processing history.

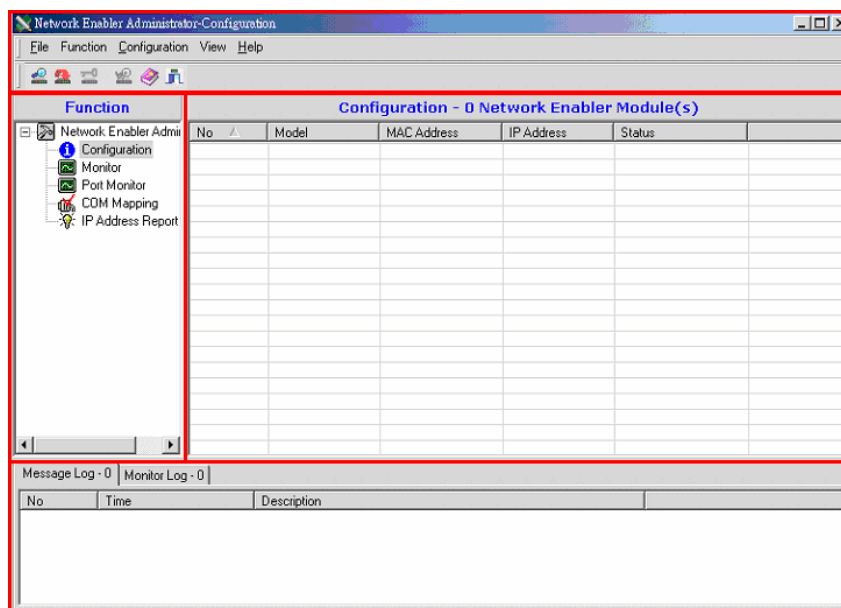


## Broadcast Search

The **Broadcast Search** function is used to locate all NE-4100 Series modules that are connected to the same LAN as your computer. Since the Broadcast Search function searches by MAC address and not IP address, all NE-4100 Series modules connected to the LAN will be located, regardless of whether or not they are part of the same subnet as the host.


1. Click on the **Network Enabler Administrator** icon or click on **Start→Programs→Network Enabler Administrator→Network Enabler Administrator** to start the Network Enabler Administrator program.




- Click on **Configuration** from the menu bar, and then select **Broadcast Search** from the drop-down menu.

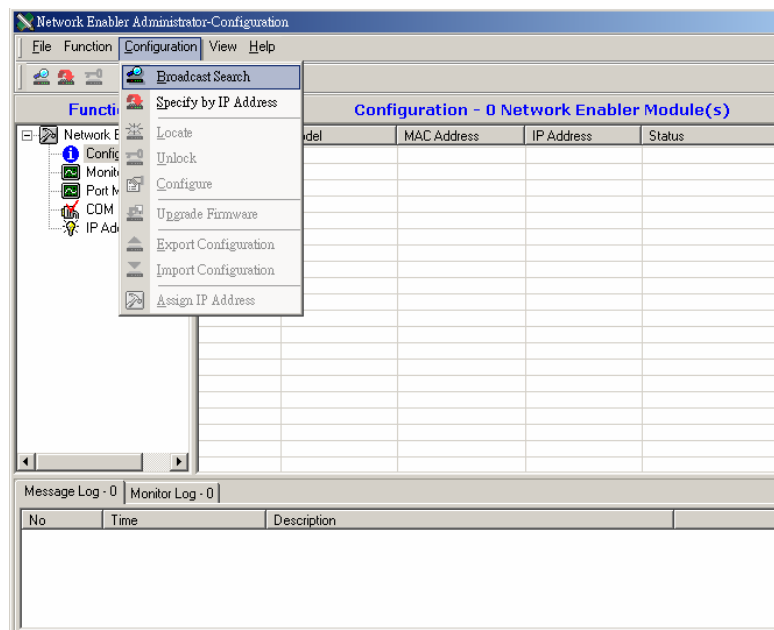

- A **Searching** window will open, showing that the program is searching for NE-4100 Series connected to this network.

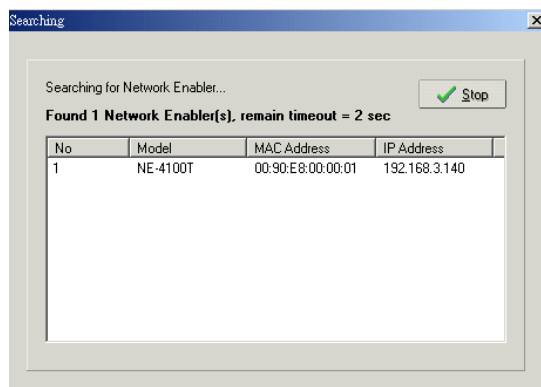

- After the search is finished, all NE-4100 Series found will be shown in the right pane of the **Configuration** window. If you locate more than one module connected to this network, refer to the MAC address on the module(s) to determine which modules are the ones you wish to configure.

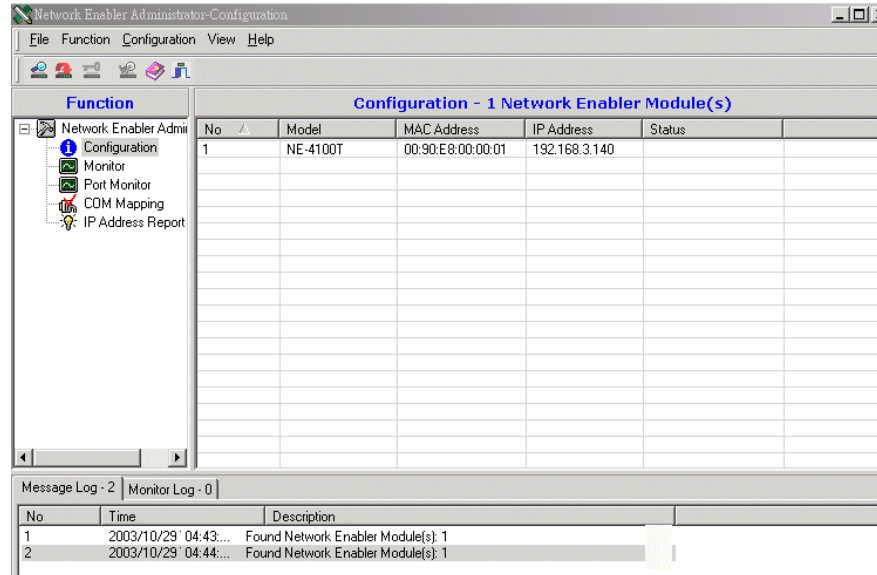


#### ATTENTION




Before modifying an NE-4100 Series' configuration, use **Broadcast Search** or **Specify by IP Address** to locate NE-4100 Series connected to the LAN.

## Unlock Password Protection

If the NE-4100 Series is password protected, then you will not be able to use the right click or double click method to open the configuration page. Before you can make any modifications to the NE-4100 Series configuration, you need to unlock the NE-4100 Series.

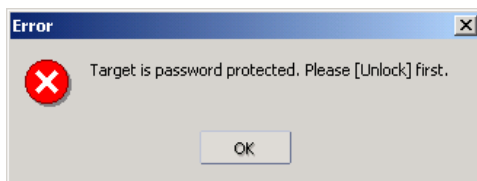

- Select the NE-4100 Series module that you would like to unlock, and click the right mouse button. Select **Unlock** from the drop down list.

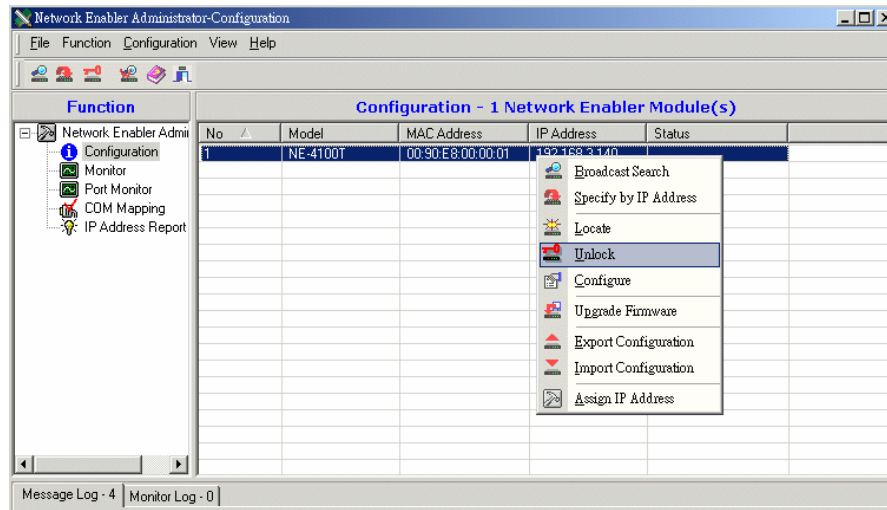

- After inputting the correct password, an Information window will display as shown here.



The meanings of the six states are as follows (note that the term Fixed is borrowed from the standard fixed IP address networking terminology):

### ***Lock***

The NE-4100 Series is password protected, “Broadcast Search” was used to locate it, and the password has not yet been entered from within the current Administrator session.

### ***Unlock***

The NE-4100 Series is password protected, “Broadcast Search” was used to locate it, and the password has been entered from within the current Administrator session. Henceforth during this Administrator session, activating various utilities for this NE-4100 Series will not require re-entering the password.

### ***Blank***

The NE-4100 Series is not password protected, and “Broadcast Search” was used to locate it.

### ***Fixed***

The NE-4100 Series is not password protected, and “Search by IP address” was used to locate it.

### ***Lock Fixed***


The NE-4100 Series is password protected, “Specify by IP address” was used to locate it, and the password has not yet been entered from within the current Administrator session.

### ***Unlock Fixed***


The NE-4100 Series is password protected, “Specify IP Address” was used to locate it, and the password has been entered from within the current Administrator session. Henceforth during this Administrator session, activating various utilities for this NE-4100 Series will not require re-entering the password.

## Configuring NE-4100 Series


1. Select the NE-4100 Series module you wish to configure, and click the right mouse button. Select **Configure** from the drop down list.

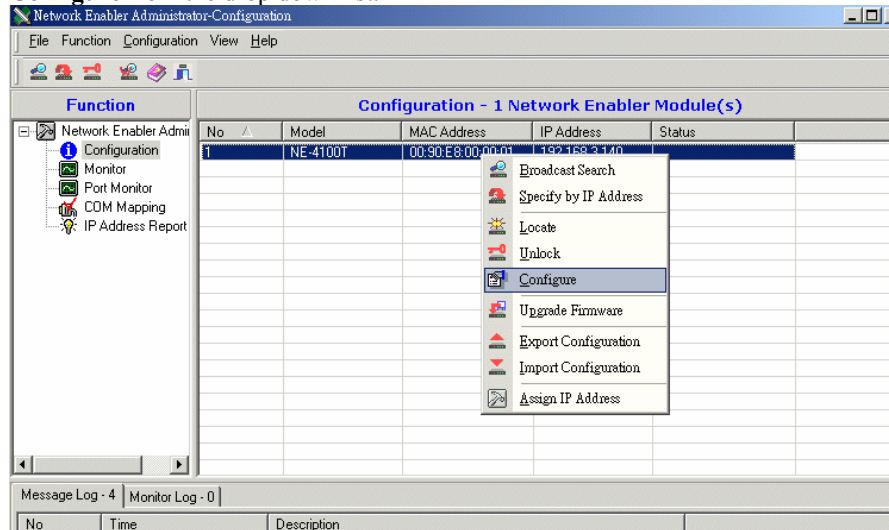

2. The next window to open shows that Configurator is processing the configuration of that NE-4100 Series module.

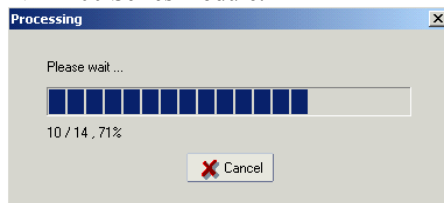

3. After the processing is done, the Configurator window will open.

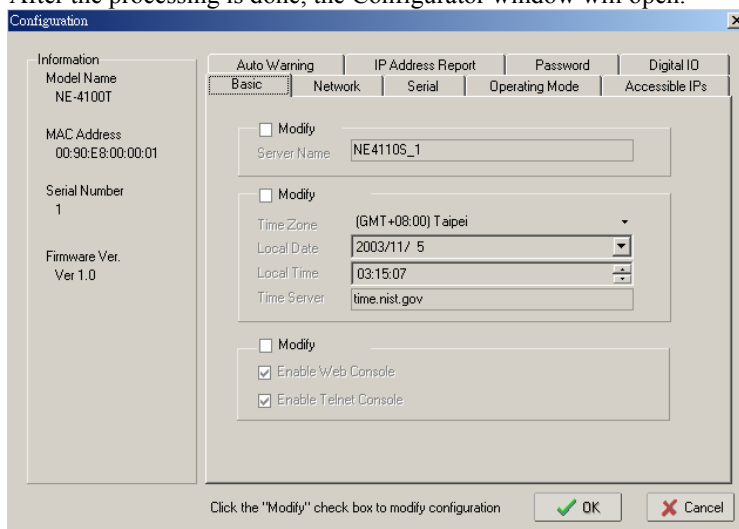

The Configurator window has six tabs—Basic, Network, Serial, Operating Mode, Accessible IPs, and Password—that allow the user to view and modify basic parameters related to the NE-4100 Series operation. Refer to Chapter 6 for each parameter's function definition. To modify the configuration, you must first click in the modify box to activate the parameter setting box.

**ATTENTION**




You can simultaneously modify the configurations of multiple NE-4100 Series that are of the same model.


To select multiple NE-4100 Series, hold down the Ctrl key when selecting additional NE-4100 Series, or hold down the Shift key to select a group of NE-4100 Series.

## Upgrading Firmware


1. Input the password to Unlock the NE-4100 Series, and then right click on a specific module and select the Upgrade Firmware function to start upgrading the firmware.

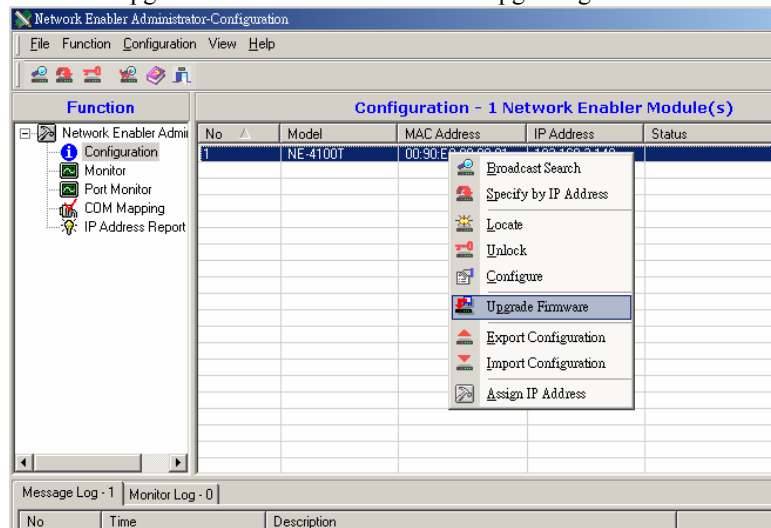

2. Select the correct ROM file to be downloaded to the NE-4100 Series. Visit Moxa's website at [www.moxa.com](http://www.moxa.com) for the latest firmware release.

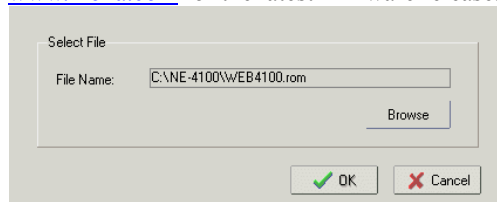

3. Wait patiently while the Upgrade Firmware action is being processed.

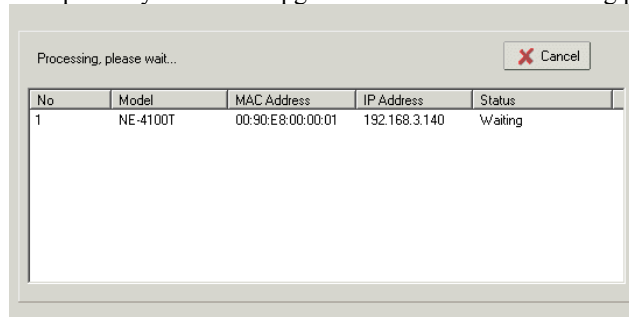


**ATTENTION**

You can simultaneously upgrade the firmware of multiple NE-4100 series that are of the same model.


To select multiple NE-4100 series, hold down the Ctrl key when selecting an additional NE-4100 series, or hold down the Shift key to select a block of NE-4100 series.

## Export/Import

1. Right click on a specific NE-4100 Series and select the Export function to start exporting the configuration file. The Export Configuration function is a handy tool that can be used to produce a text file containing the current configuration of a particular NE-4100 Series.

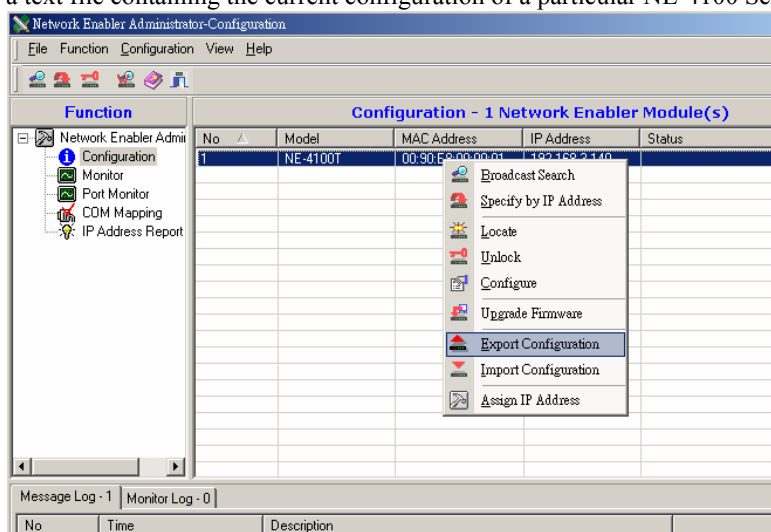

2. The Import Configuration function is used to import an NE-4100 Series configuration from a file into one or more of the same model of NE-4100 Series. To import a configuration, first select the target modules, click on the right mouse, and select **Import Configuration** from the drop down menu.

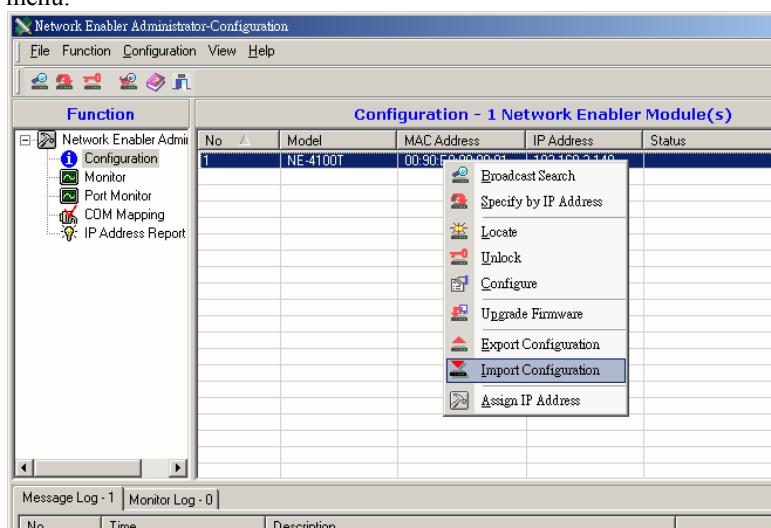

**ATTENTION**



You can simultaneously import the same configuration file into multiple NE-4100 series that are of the same model.

To select multiple NE-4100 series, hold down the Ctrl key when selecting an additional NE-4100 series, or hold down the Shift key to select a block of NE-4100 series.


## Monitor

There are two methods available to start the Monitor function.


1. First use **Broadcast Search** under the Configuration Function group, and then click on **Monitor** → **Add Target** → **Select from the list**.
2. First click on **Monitor**, and then **Add Target** → **Rescan**.

To use the Monitor function, follow the steps described below.


1. Select Broadcast under the Configuration function group.

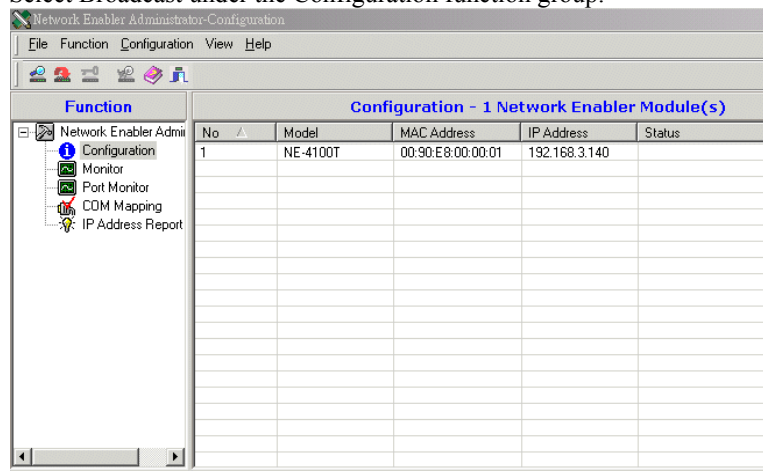


2. Click on **Monitor**.

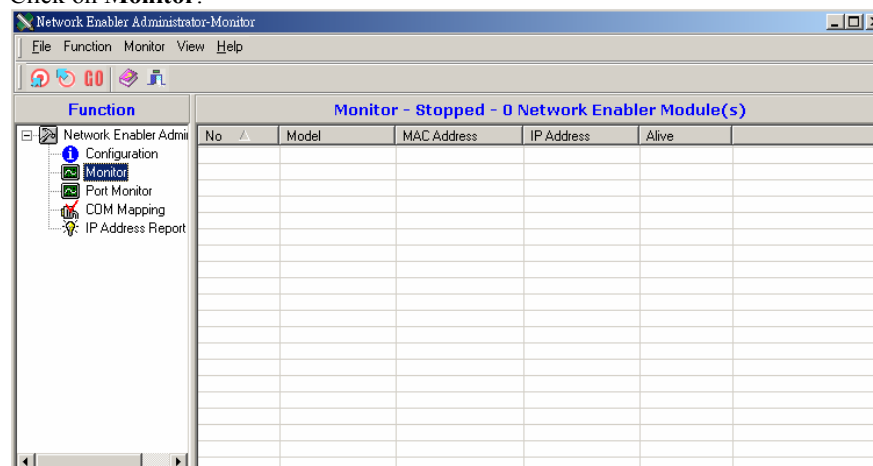


3. Select **Add Target**.

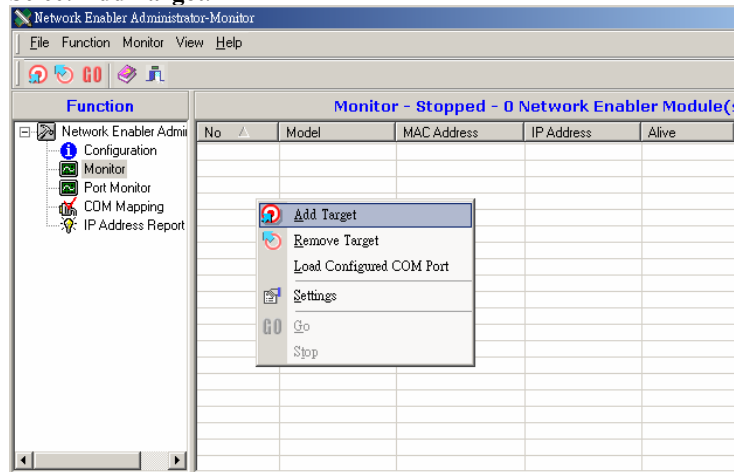

4. When you select add target, you will see an NE-4100 Series list that looks the same as when using **Configuration → Broadcast Search**. Check the NE-4100 Series modules you would like to Monitor, and then click **OK**.

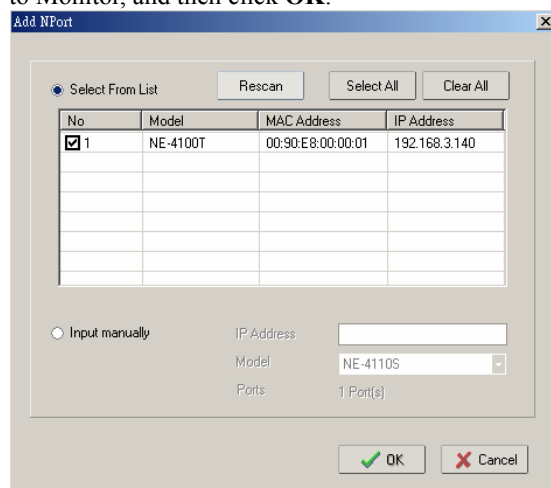


5. The NE-4100 Series list will now appear on the Monitor Screen.

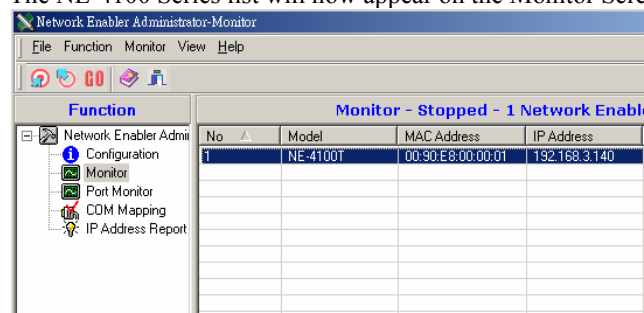





- Right click the panel and select **Settings**.

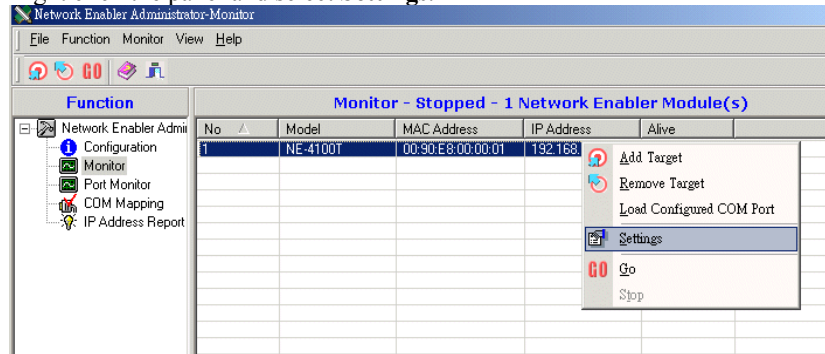


- Select Monitor Items.

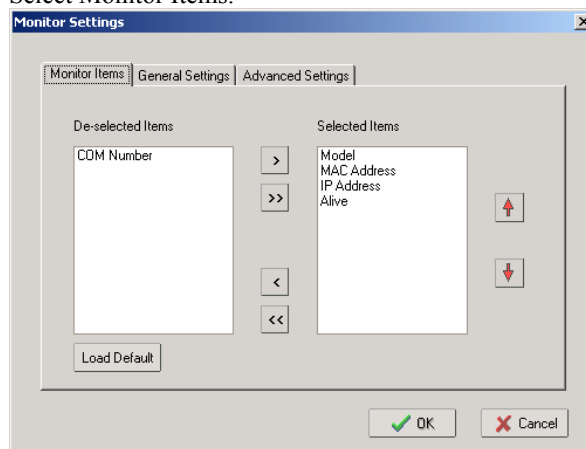


- Select a Refresh Rate (the default is 3 seconds).

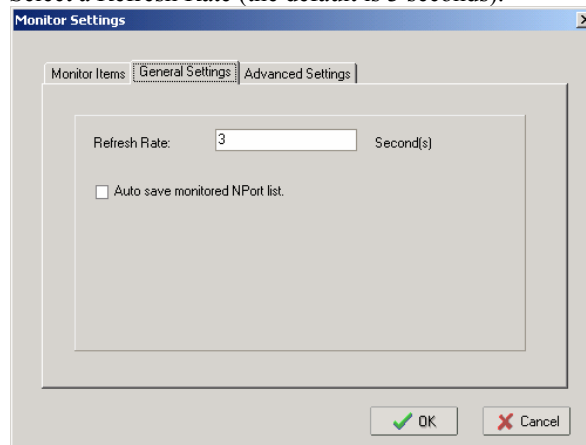


9. Select Display warning message or Play the warning music in WAV format when a new event occurs. New event means one of the NE-4100 Series in the monitor is “Alive” or “Not Alive,” or has lost its connection with the Monitor program.

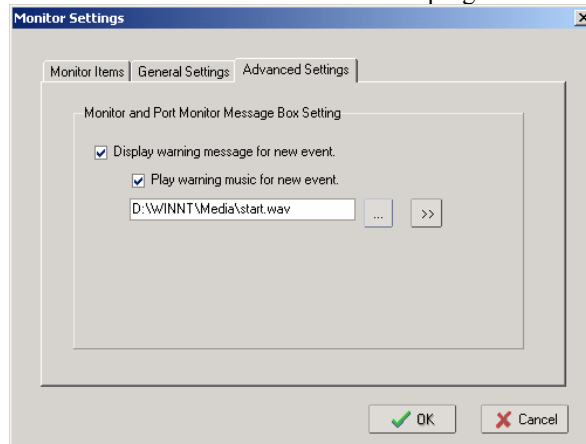


10. Press **Go** to start Monitor.

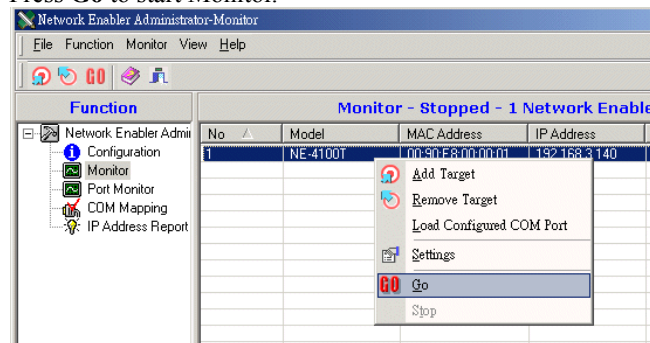


11. In this example, the NE-4100 Series shown in the list will be monitored.

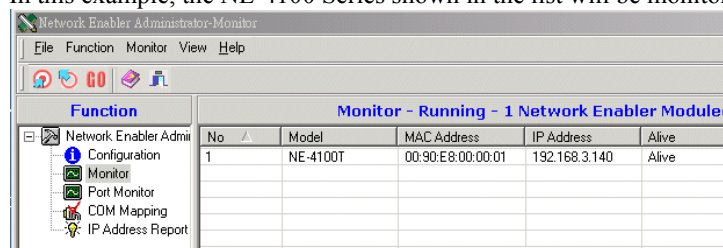

12. When one of the NE-4100 Series loses connection with the Monitor program, a warning alert will display automatically. The warning music will be played at the same time.

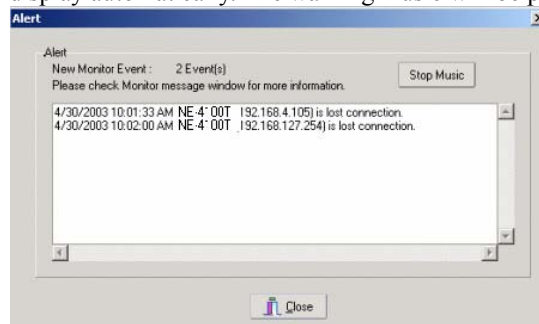


13. If the NE-4100 Series gets reconnected, a warning will be displayed to remind the user the NE-4100 Series is now “Alive.”

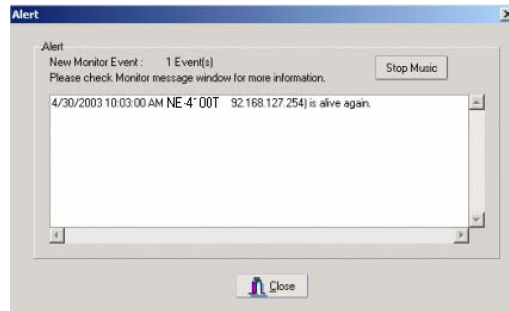


## Port Monitor

The process is the same as in the previous “Monitor” section. The only difference is that you can select more items under Port Monitor than under port status.

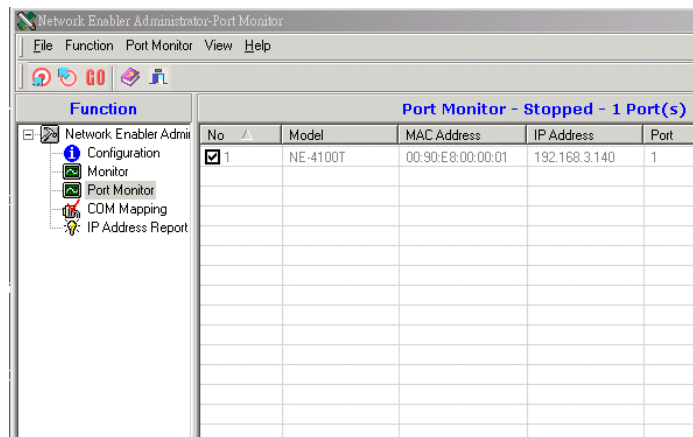

Select the Monitor Items.

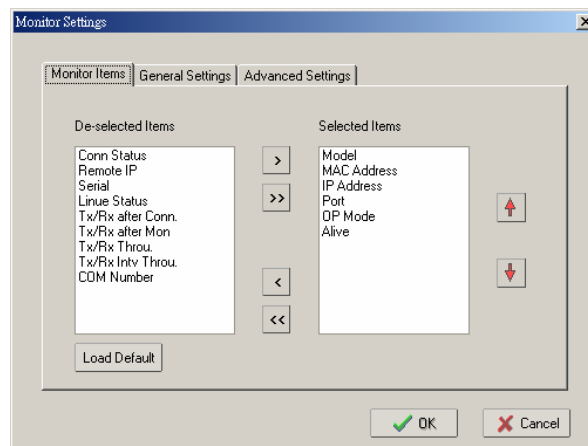

## COM Mapping

Network Enabler Administrator Suite comes with the Windows 95/98/ME/NT/2000/XP Real COM drivers. After you install Network Enabler Administrator Suite, there are two ways to set up the NE-4100 Series' serial port as your host's remote COM port.

The first way is **On-line COM Mapping**. On-line COM Mapping will check to make sure the NE-4100 Series is correctly connected to the network and then install the driver on the host computer.

The second way is **Off-line COM Installation**, without connecting the NE-4100 Series to the network first. Off-line COM Mapping can decrease the system integrator's effort by solving different field problems. Via off-line installation, users can process the host software installation and then install the NE-4100 Series to different fields.

Use the following procedure to map COM ports:

1. On-line COM Mapping:


Connect NE-4100 Series to the network → Set NE-4100 series to the proper IP address → Map COMs to your host → Apply Change.

2. Off-line COM Mapping:


Map COMs to your host → Apply Change → Connect NE-4100 Series to the network → Configure NE-4100 Series' IP address.

## On-line COM Mapping


Broadcast Search for NE-4100 Series on the network.

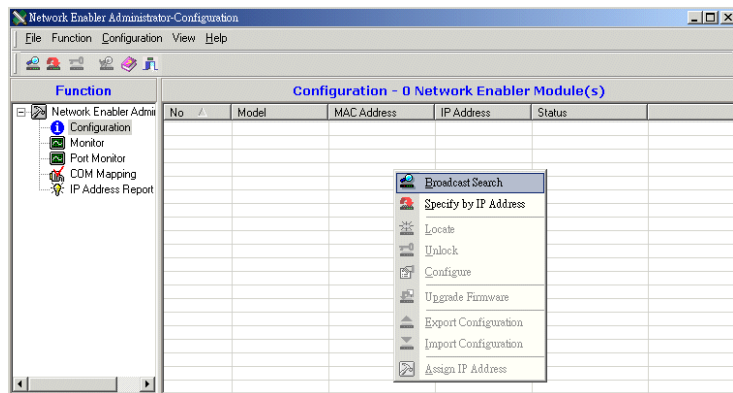


Select the COM Mapping function group.

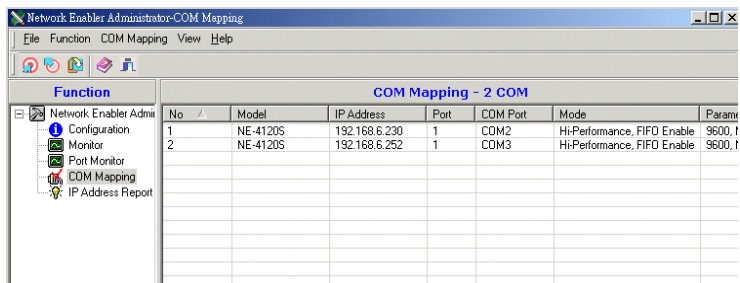


Add the target to which you would like to map COM ports.

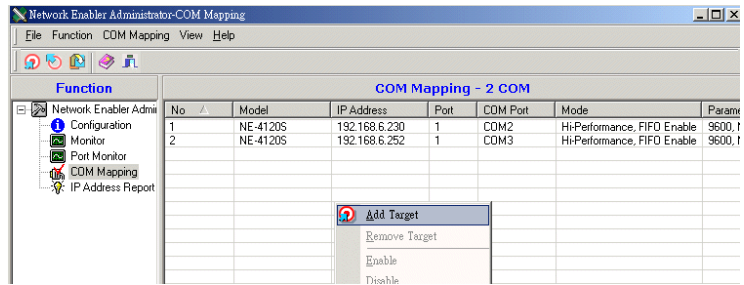


The NE-4100 Series list that appears will be based on the Broadcast Search on the Configuration. Select the NE-4100 Series to which you want to map COM ports.

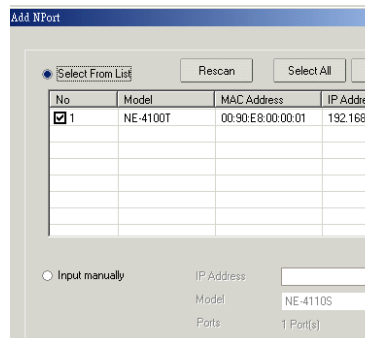

Select **COM Setting** to modify COM No., default setting, etc.

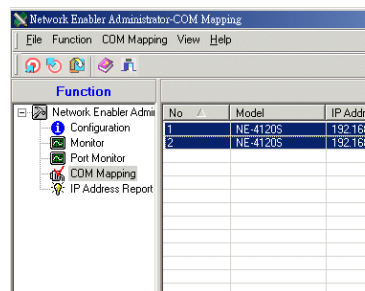

Select the COM No. Those “In use,” “Assigned” COM ports will also be indicated in this dialog window. If you select multiple serial ports or multiple NE-4100 Series, remember to check the “Auto Enumerating” function to use the COM No. you select to be the first COM No.


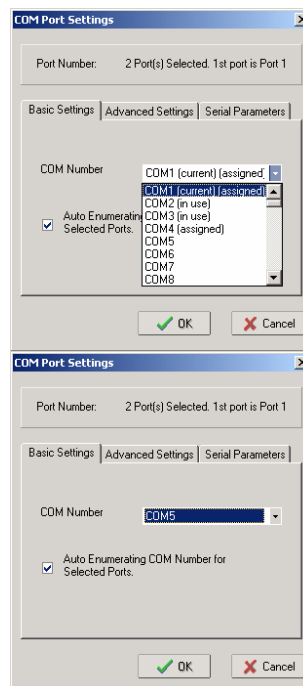


**Hi-performance** mode is the default for Tx mode. If the driver completes sending data out to the NE-4100 Series, the driver will respond to the program with “Tx Empty.”


But, under **classical mode**, the driver will not notify the user’s program that Tx is completed until all Tx data has been sent out from the NE-4100 Series; this mode will cause lower throughput. If you want to make sure all data is sent out before further processing, classical mode is recommended.

**Enable/Disable Tx/Rx FIFO.** If disabled, NE-4100 Series will send one byte each time the Tx FIFO becomes empty; and Rx interrupt will be generated for each incoming byte. This will cause faster response and lower throughput. If you want to use XON/XOFF flow control, we recommend setting FIFO to Disable.


The Serial Parameter settings shown here are the default settings when the NE-4100 Series is powered on. The program can define the serial parameter after the program opens the port via Win32API with the specific serial parameters.

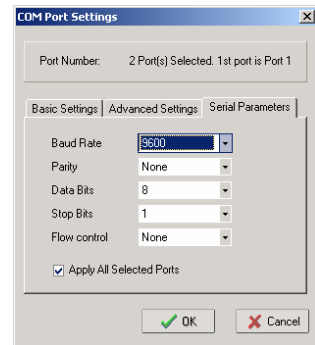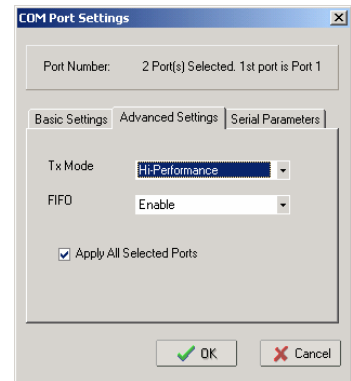


After setting the COM Mapping, remember to select **Apply Change** to save the information in the host system registry. The host computer will not be able to use the COM port until after selecting Apply Change.

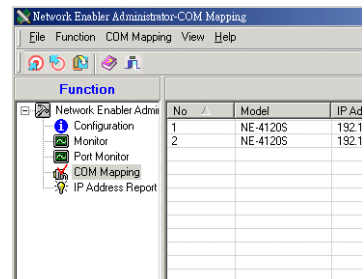

Select **Discard Change** to tell Administrator to NOT save the COM Mapping information to the host.


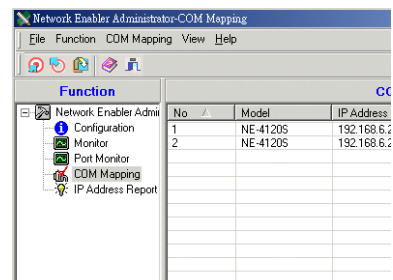


To save the configuration to a text file, select **Export COM Mapping**. You will then be able to import this configuration file to another host and use the same COM Mapping settings in the other host.

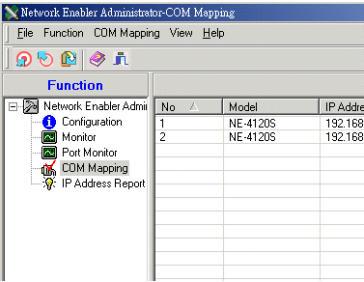


Off-line COM Mapping

Add a target by inputting the IP address and selecting the Model Name without physically connecting the NE-4100 Series to the network.

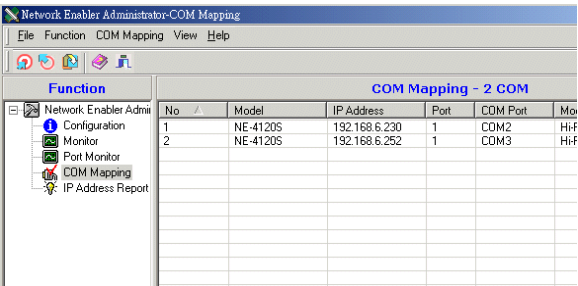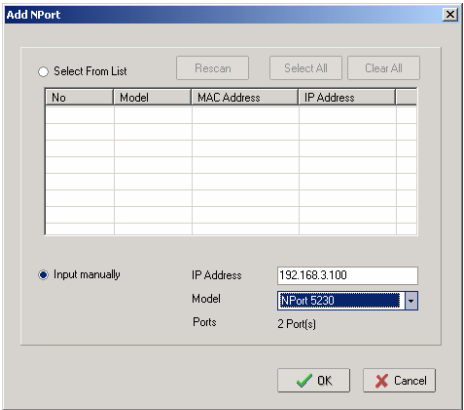

Apply change.

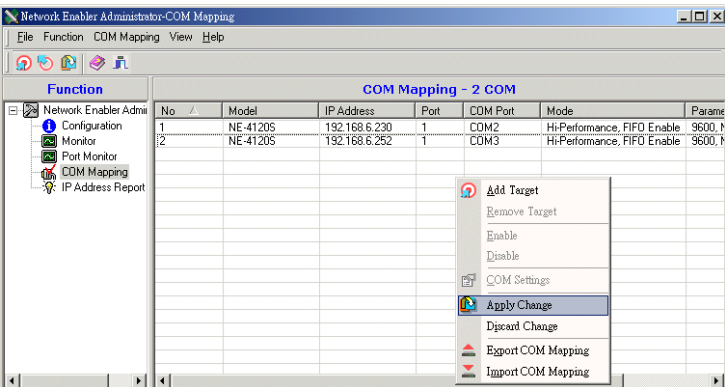







## Well Known Port Numbers

---

This appendix is included for your reference. Listed below are Well Known Port Numbers that may cause network problems if you configure NE-4100 Series for the same port. Refer to RFC 1700 for Well Known Port Numbers or refer to the following introduction from IANA.

The port numbers are divided into three ranges: the Well Known Ports, the Registered Ports, and the Dynamic and/or Private Ports.

The Well Known Ports are those from 0 through 1023.

The Registered Ports are those from 1024 through 49151.

The Dynamic and/or Private Ports are those from 49152 through 65535.

The Well Known Ports are assigned by IANA, and on most systems, can only be used by system processes or by programs executed by privileged users. The following table shows famous port numbers among the well-known port numbers. For more details, please visit the IANA website at <http://www.iana.org/assignments/port-numbers>.

TCP Socket	Application Service
0	reserved
1	TCP Port Service Multiplexor
2	Management Utility
7	Echo
9	Discard
11	Active Users (systat)
13	Daytime
15	Netstat
20	FTP data port
21	FTP CONTROL port
23	Telnet
25	SMTP (Simple Mail Transfer Protocol)
37	Time (Time Server)
42	Host name server (names server)
43	Whois (nickname)

---

49	(Login Host Protocol) (Login)
53	Domain Name Server (domain)
79	Finger protocol (Finger)
<b>TCP Socket</b>	<b>Application Service</b>
80	World Wide Web HTTP
119	Network news Transfer Protocol (NNTP)
123	Network Time Protocol
213	IPX
160 – 223	Reserved for future use

<b>UDP Socket</b>	<b>Application Service</b>
0	reserved
2	Management Utility
7	Echo
9	Discard
11	Active Users (sysstat)
13	Daytime
35	Any private printer server
39	Resource Location Protocol
42	Host name server (names server)
43	Whois (nickname)
49	(Login Host Protocol) (Login)
53	Domain Name Server (domain)
69	Trivial Transfer Protocol (TFTP)
70	Gopher Protocol
79	Finger Protocol
80	World Wide Web HTTP
107	Remote Telnet Service
111	Sun Remote Procedure Call (Sunrpc)
119	Network news Transfer Protocol (NNTP)
123	Network Time protocol (ntp)
161	SNMP (Simple Network Management Protocol)
162	SNMP Traps
213	IPX (Used for IP Tunneling)

# B

## NECI Library

---

NECI (Network Enabler Configuration Interface) is a set of APIs that run in the Windows 95/98/ME/NT/2000/XP system to search, locate, and configure the NE-4000T over the network. The NE-4100 Series library can be found in the folder **.\SDK\DSCILIB\LIBRARY** on the CD enclosed with NE-4100 Series product. For more information, refer to **Svrcctl.chm** in that directory, and examples located in **.\SDK\NECILIB\EXAMPLE**.



## DIO Commands

---

In this appendix, we give the reference DIO commands used to access the Digital I/O status of the Network Enabler from an Ethernet network. The Digital I/O status can be accessed by a specific TCP port (default 5001) on the Network Enabler.

### Command Packet Format:

Length (Bytes)	4	1 – 255
Format	*Header	Data

Send the Command packet to the Network Enabler. “Data” field is command specific.

### ACK Packet Format:

Length (Bytes)	4	1 -255
Format	*Header	Data

The Network Enabler returns by ACK packet. You can get the Digital I/O status and input/output operation mode by checking the “Data” field of the packet.

### \*Header Format:

Length (Bytes)	1	1	1	1
Format	Command	Version (must be 2)	Command Status	Length (for data)

Check the “Command Status” to get the result after sending the Command packet.

**Command:** This field defines the command code. For example, 1(hex) represents “read single D I/O.” For more information, please refer to following content.

**Command Status:** This field returns the status of the command.

- 0 – OK
- 1 – Command error; may be unknown
- 2 – Version error; not supported by this version
- 3 – Length error; the length member does not match the attached data
- 4 – Operation error; you cannot set the DIO mode to input mode, and set the DO status at the same time
- 5 – “Packet too short” error
- 6 – DIO number error; might not support request DIO number
- 0xFF – other unknown error

### Data Structure Definition:

*C code example:*

```
//define DIO Header format
typedef struct _DIO_Header_Struct {
    char  command;
    char  version;    /* This specification is version 2 */
    char  status;
    char  length;
```

---

```
} DIOHeaderStruct, *pDIOHeaderStruct;
```

```
//define DIO Packet format
//Used for Command and ACK packet
typedef struct _DIO_Packet_Struct {
    DIOHeaderStruct header;
    char data[255];
} DIOPacketStruct, *pDIOPacketStruct;
```

## Command Code Usage

### 1. Reading Single DIO

Parameters:

Command code: 1(hex)  
Version: 2(hex)  
Command Status: doesn't matter  
Length of data: 1(hex), represents one byte.  
data[0]: Fill in the number of the DIO you wish to access. The DIO number starts from 0(hex).

Return:

Command Status: Check the Command Status code on the previous page.  
Length of data: 3(hex). Must be 3 bytes of return code in this mode.  
data[0]: The number of the DIO you wish to access.  
data[1]: DIO mode(hex), 0 for IN, 1 for OUT  
data[2]: DIO status(hex), 0 for LOW, 1 for HIGH

*C code example:*

```
BOOL ReadSingleDIO(int port, int *mode, int *status)
{
    DIOPacketStruct packet;

    packet.header.command = 1;    // read single DIO command
    packet.header.version = 2;    // DIO protocol version
    packet.header.length = 1;     // data length
    packet.data[0] = (char)port;   // Number of the DIO
    send(SocketFd, (char *)&packet, sizeof(DIOHeaderStruct)+1, 0); //Send TCP Packet
    // Process the returned data here.
    return TRUE;
}
```

### 2. Writing a Single DIO

Parameters:

Command code: 2(hex)  
Version: 2(hex)  
Command Status: doesn't matter  
Length of data: 3(hex); represents three bytes.  
data[0]: The number of the DIO you wish to access.  
data[1]: DIO mode(hex), 0 for IN, 1 for OUT  
data[2]: DIO status(hex), 0 for LOW, 1 for HIGH

Return:

Command Status: Check the Command Status code on the previous page.  
Length of data: 3(hex). Must be 3 bytes of return code in this mode.  
data[0]: The number of the DIO you wish to access.  
data[1]: DIO mode(hex), 0 for IN, 1 for OUT  
data[2]: DIO status(hex), 0 for LOW, 1 for HIGH

*C code example:*

```
void WriteSingleDIO(int port, int mode, int status)
{
    DIOPacketStruct packet;

    packet.header.command = 2;    // write single DIO command
    packet.header.version = 2;    // DIO protocol version
    packet.header.length = 3;     // data length
    packet.data[0] = (char)port;  // number of the DIO
    packet.data[1] = (char)mode;  // DIO mode
    packet.data[2] = (char)status; // DIO status;
    send(SocketFd, (char *)&packet, sizeof(DIOHeaderStruct)+3, 0); //Send TCP packet
    //Process the returned data here
}
```

### 3. Reading Multiple DIOs

Parameter:

Command code: 5(hex)

Version: 2(hex)

Command status: doesn't matter

Length of data: 2(hex); represents two bytes.

data[0]: Number of the DIO you wish to access first.

data[1]: The last number of the DIO you wish to access.

Return:

Command Status : Check the Command Status code on the previous page.

Length of data: (end-start+1)\*2

data[0]: mode of start DIO

data[1]: status of start DIO

data[2]: mode of (start+1) DIO

data[3]: status of (start+1) DIO

....

data[(end-start)\*2]: mode of end DIO

data[(end-start)\*2+1]: status of end DIO

*C code example:*

```
BOOL ReadMultipleDIO(int start, int end, int *mode, int *status)
{
    DIOPacketStruct packet;

    packet.header.command = 5;    // Read Multiple DIO Commands
    packet.header.version = 2;    // DIO protocol command version
    packet.header.length = 2;     // data length
    packet.data[0] = start;       // start of the DIO number
    packet.data[1] = end;         // end of the DIO number
    send(SocketFd, (char *)&packet, sizeof(DIOHeaderStruct)+2, 0); //Send TCP packet
    //Process the returned data here
    return TRUE;
}
```

---

#### 4. Writing Multiple DIOs

Parameters:

Command code: 6(hex)  
Version: 2(hex)  
Command status: doesn't matter  
Length of data:  $(\text{end}-\text{start}+1)*2 + 2$   
data[0]: Number of the DIO you wish to access first.  
data[1]: The last number of the DIO you wish to access  
data[2]: mode of start DIO  
data[3]: status of start DIO  
data[4]: mode of (start+1) DIO  
data[5]: status of (start+1) DIO  
....  
data[(end-start)\*2+2]: mode of end DIO  
data[(end-start)\*2+3]: status of end DIO

Return:

Command Status: Check the Command Status code on the previous page.  
Length of data :  $(\text{end}-\text{start}+1)*2$   
data[0]: mode of start DIO  
data[1]: status of start DIO  
data[2]: mode of (start+1) DIO  
data[3]: status of (start+1) DIO  
....  
data[(end-start)\*2]: mode of end DIO  
data[(end-start)\*2+1]: status of end DIO

*C code example:*

```
void WriteMultipleDIO(int start, int end, int* mode, int* status)
{
    DIOPacketStruct packet;

    packet.header.command = 6;           // Write Multiple DIO Command Codes
    packet.header.version = 2;          // DIO protocol version
    packet.header.length = (end-start+1)*2+2; // data length
    packet.data[0] = start;              // start DIO number
    packet.data[1] = end;               // end DIO number
    int i, len;
    for ( i=0; i<=(end-start+1);i++ ) {
        packet.data[i+2] = mode[i];
        packet.data[i+3] = status[i];
    }
    send(SocketFd, (char*)&packet, (end-start+1)*2+2+sizeof(DIOHeaderStruct), 0); //Send TCP packet
    //Process the returned data here
}
```

Note: A utility that can be used to test the DIO access commands can be found on the CD-ROM.





## SNMP Agent with MIB II & RS-232 Like Group

---

NE-4100 series has a built-in SNMP (Simple Network Management Protocol) agent software. It supports SNMP Trap, RFC1317 RS-232 like group and RFC 1213 MIB-II. The following table lists the standard MIB-II groups, as well as the variable implementations for NE-4100 series.

### RFC1213 MIB-II supported SNMP variables:

System MIB	Interfaces MIB	IP MIB	ICMP MIB
SysDescr	ifNumber	ipForwarding	IcmpInMsgs
SysObjectID	ifIndex	ipDefaultTTL	IcmpInErrors
SysUpTime	ifDescr	ipInreceives	IcmpInDestUnreachs
SysContact	ifType	ipInHdrErrors	IcmpInTimeExcds
SysName	ifMtu	ipInAddrErrors	IcmpInParmProbs
SysLocation	ifSpeed	ipForwDatagrams	IcmpInSrcQuenchs
SysServices	ifPhysAddress	ipInUnknownProtos	IcmpInRedirects
	ifAdminStatus	ipInDiscards	IcmpInEchos
	ifOperStatus	ipInDelivers	IcmpInEchoReps
	ifLastChange	ipOutRequests	IcmpInTimestamps
	ifInOctets	ipOutDiscards	IcmpTimestampReps
	ifInUcastPkts	ipOutNoRoutes	IcmpInAddrMasks
	ifInNUcastPkts	ipReasmTimeout	IcmpOutMsgs
	ifInDiscards	ipReasmReqds	IcmpOutErrors
	ifInErrors	ipReasmOKs	IcmpOutDestUnreachs

---

<b>System MIB</b>	<b>Interfaces MIB</b>	<b>IP MIB</b>	<b>ICMP MIB</b>
SysServices	ifInUnknownProtos	ipReasmFails	IcmpOutTimeExcds
	ifOutOctets	ipFragOKs	IcmpOutParmProbs
	ifOutUcastPkts	ipFragFails	IcmpOutSrcQuenchs
	ifOutNUcastPkts	ipFragCreates	IcmpOutRedirects
	ifOutDiscards	ipAdEntAddr	IcmpOutEchos
	ifOutErrors	ipAdEntIfIndex	IcmpOutEchoReps
	ifOutQLen	ipAdEntNetMask	IcmpOutTimestamps
	ifSpecific	ipAdEntBcastAddr	IcmpOutTimestampReps
		ipAdEntReasmMaxSize	IcmpOutAddrMasks
		IpNetToMediaIfIndex	IcmpOutAddrMaskReps
		IpNetToMediaPhysAddress	
		IpNetToMediaNetAddress	
		IpNetToMediaType	
		IpRoutingDiscards	

<b>UDP MIB</b>	<b>TCP MIB</b>	<b>SNMP MIB</b>
UdpInDatagrams	tcpRtoAlgorithm	snmpInPkts
UdpNoPorts	tcpRtoMin	snmpOutPkts
UdpInErrors	tcpRtoMax	snmpInBadVersions
UdpOutDatagrams	tcpMaxConn	snmpInBadCommunityNames
UdpLocalAddress	tcpActiveOpens	snmpInASNParseErrs
UdpLocalPort	tcpPassiveOpens	snmpInTooBigs
	tcpAttempFails	snmpInNoSuchNames
<b>Address Translation MIB</b>	tcpEstabResets	snmpInBadValues
AtIfIndex	tcpCurrEstab	snmpInReadOnlys
AtPhysAddress	tcpInSegs	snmpInGenErrs
AtNetAddress	tcpOutSegs	snmpInTotalReqVars

# E

## **Service Information**

---

This appendix shows you how to contact Moxa for information about this and other products, and how to report problems.

In this appendix, we cover the following topics.

- ❑ **MOXA Internet Services**
- ❑ **Problem Report Form**
- ❑ **Product Return Procedure**

---

## MOXA Internet Services

Customer satisfaction is our number one concern, and to ensure that customers receive the full benefit of our products, Moxa Internet Services has been set up to provide technical support, driver updates, product information, and user's manual updates.

### The following services are provided

E-mail for technical support ..... [support@moxa.com.tw](mailto:support@moxa.com.tw)

World Wide Web (WWW) Site for product information:

..... <http://www.moxa.com>

# Problem Report Form

# MOXA NE-4100 Series

<b>Customer name:</b>	
<b>Company:</b>	
<b>Tel:</b>	<b>Fax:</b>
<b>Email:</b>	<b>Date:</b>

1. **Moxa Product:** ☐ NE-4100T    ☐ NE-4110S    ☐ NE-4110A    ☐ NE-4120S    ☐ NE-4120A
2. **Serial Number:** \_\_\_\_\_

**Problem Description:** Please describe the symptoms of the problem as clearly as possible, including any error messages you see. A clearly written description of the problem will allow us to reproduce the symptoms, and expedite the repair of your product.

[illegible]

---

## Product Return Procedure

For product repair, exchange, or refund, the customer must:

- ◆ Provide evidence of original purchase.
- ◆ Obtain a Product Return Agreement (PRA) from the sales representative or dealer.
- ◆ Fill out the Problem Report Form (PRF). Include as much detail as possible for a shorter product repair time.
- ◆ Carefully pack the product in an anti-static package, and send it, pre-paid, to the dealer. The PRA should be visible on the outside of the package, and include a description of the problem, along with the return address and telephone number of a technical contact.